

KENWOOD

Installation:

- (1) Turn the radio off before plugging in the Ear Hanger.

Note: Installation of the Ear Hanger while the radio is on may cause unwanted transmit or may cause your radio to jump to another channel. If this should happen, turn off the radio. The radio can then be turned back on, restoring normal operations.

- (2) Attach Ear Hanger to the radio accessory connector.
- (3) The Ear hanger can be mounted on either the right or left ear.


Operation:

Turn ON and operate the radio as explained in the radio operating instructions. Installing the Ear Hanger (1) bypasses the radio's speaker and routes the output to the Ear Hanger's speaker, and (2) disables the radio's microphone and enables the boom microphone.

Microphone position is adjusted by bending the boom to place the microphone to within one inch or 2.5mm of the mouth.

Microphone is activated by either radio push-to-talk or in-line push-to-talk. When using VOX (voice operated transmit) equipped radios, refer to the radio instruction manual for VOX operating instructions.

Turn it down: Use the minimum receiver volume necessary. Kenwood wants you listening for a lifetime.

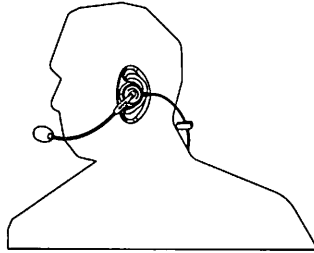

Kenwood USA Corporation, Communications Sector
P.O. Box 22745 (mail)
2201 E. Dominguez St. (ship to)
Long Beach, CA 90801-5745
Phone: 800-752-0986 Fax: 310-761-8246

Kenwood Electronics Canada, Inc.
6070 Kestrel Road Mississauga, Ontario L5T1S8
Phone: 905-670-7211 Fax: 905-670-7225



MADE IN CHINA



0019048162915