## KENWOOD

## Installation:

- (1) Turn the radio off before plugging in the Ear Hanger. Note: Installation of the Ear Hanger while the radio is on may cause unwanted transmit or may cause your radio to jump to another channel. If this should happen, turn off the radio. The radio can then be turned back on, restoring normal operations.
- Attach Ear Hanger to the radio accessory connector.
- (3) The Ear hanger can be mounted on either the right or left ear.

## **Operation:**

Turn ON and operate the radio as explained in the radio operating instructions. Installing the Ear Hanger (1) bypasses the radio's speaker and routes the output to the Ear Hanger's speaker, and (2) disables the radio's microphone and enables the Ear Hanger's microphone.

Microphone position is recommended on or close to the collar (shortest distance to the mouth).

Microphone is activated by either radio push to talk or in-line push to talk. When using VOX (voice operated transmit) equipped radios, refer to the radio instruction manual for VOX operating instructions.

Turn it down: Use the minimum receiver volume necessary. Kenwood wants you listening for a lifetime.

Kenwood USA Corporation, Communications Sector P.O. Box 22745 (mail) 2001 E. Demonstrates (chin to)

P.O. Box 22/45 (mail) 2201 E. Dominguez St. (ship to) Long Beach, CA 90801-5745 Phone: 800-752-0986 Fax: 310-761-8246

Kenwood Electronics Canada, Inc. 6070 Kestrel Road Mississauga, Ontario L5T1S8 Phone: 905-670-7211 Fax: 905-670-7225





