
AVP3K Owner's Guide

Installing the Battery Packs:

- With the back of the radio facing you, remove the belt clip (see diagram below) for easy access, then remove the battery compartment cover by pressing down on the top center and sliding it down from the radio.
- 2. Insert the Midland Ni MH battery pack into battery compartment.
- 3. Replace the battery cover by sliding it up on the radio. Replace the belt clip, making sure it locks into place.

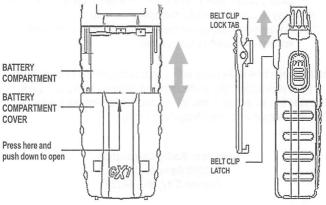

Charging the Battery Packs:

- Place the rechargeable battery packs into the radios, making sure to match up the battery contacts in the radios.
- 2. Connect the AC adapter into an AC wall outlet.
- Insert the AC adapter plug (or optional DC Cigarette Lighter adapter if charging in vehicle) into the desktop charger jack.
- Place the radios into the desktop charger slots and note that the LED indicator will light up, indicating charging function.
 - Only use the Midland NiMH battery pack.
 - Do not attempt to charge alkaline batteries or any batteries or battery packs other than the one indicated in the manual. This may cause leakage and damage to the radio.
 - For long-term storage of the radio, turn the radio OFF and remove the batteries from the radio

Initial charge time is 24 hours with a charge time of 8-12 hours thereafter. For maximum battery life, we recommend charging the battery pack when the low battery icon displays on your radio. Remove the radios from the charger when the charge time expires.

Midland Radio Corporation 5900 Parretta Drive Kansas City, MO 64120

www.midlandradio.com