

OWNER'S MANUAL

XTR-540 BATTERY POWERED LASER-RADAR DETECTOR

The Whistler Group Corporate Headquarters

3604 NW Frontage Rd. • Bentonville, AR 72712
Tel 479.273.6012 • Fax 479.273.2927

Customer Return Center

551 N 13th St. • Rogers, AR 72756
Customer Service Tel 800.531.0004
www.whistlergroup.com

P/N 260019, © 2009 The Whistler Group, Inc.



Dear Whistler Detector Owner,

If you have questions concerning the operation of this Whistler product please call:

CUSTOMER SERVICE
1-800-531-0004

Monday - Friday • 8:00 am - 5:00 pm CT

or visit our website

www.whistlergroup.com

Please keep the receipt in a safe place. You may register your product online at www.whistlergroup.com. For warranty verification purposes, a copy of your dated store receipt must accompany any unit sent in for warranty work. If the unit is returned without a dated store receipt, an out of warranty service charge applies.

Note: **Your warranty period begins at the time of purchase. The warranty is validated only by the dated store receipt!** Now is the time to record the serial number of the unit in the space provided in the warranty section of the manual.

To fully acquaint yourself with the operation of your Whistler Detector and to better understand the differences between detecting radar, laser and safety radar signals, we recommend reading this entire manual or visiting our FAQ page on our website www.whistlergroup.com

Enjoy your Whistler Detector and please drive safely.

Sincerely,

The Whistler Group, Inc.

| | |
|---|----------------|
| Model Features Summary | 2 - 3 |
| Installation | 4 - 6 |
| • Battery Installation | 4 |
| • Mounting Guidelines | 5 |
| • Windshield Mounting | 5 |
| • Power Connection and Fuse Replacement | 5 |
| Operation | 6 - 13 |
| • Battery Life | 6 |
| • Battery Charging | 6 |
| • Power On and Self-Test | 7 |
| • Setting Saver | 7 |
| • Feature Engaged Confirmation | 7 |
| • Audio Level Adjustment | 7 |
| • Auto Quiet Mode | 7 |
| • Quiet Mode | 8 |
| • Teach/Tutorial Mode | 8 |
| • City/City 1/ City 2 Mode | 8 |
| • Highway Mode | 9 |
| • Backlight Setting | 9 |
| • Low Profile Alert Periscopes | 9 |
| • Compass Calibration | 10 |
| • Engaging/Disengaging VG-2 | 10 |
| • Auto Shut Off Mode | 11 |
| • Filter Mode | 11 |
| • Option Select Mode | 12 |
| • Stay Alert Feature | 13 |
| Safety Warning System™ | 13 |
| POP™ Mode Alerts | 14 |
| Laser/Radar Alerts | 14 |
| • Speed Radar Audio/Visual Alerts | 14 |
| • Laser Audio/Visual Alerts | 14 |
| • Pulse Protection® | 14 |
| VG-2 Alerts | 15 |
| • Alert Priority | 15 |
| Reset Features | 16 |
| Troubleshooting Guide | 16 - 17 |
| Care and Maintenance | 18 |
| Are Detectors Legal? | 18 |
| FCC Information | 19 |
| Speed Monitoring | 19 - 22 |
| • Radar Facts | 19 |
| • POP™ Mode | 19 |
| • Total Band Protection™ | 20 |
| • Laser Facts | 20 |
| • Other Speed Detection Systems | 21 - 22 |
| Warranty Information | 22 - 25 |
| Specifications | 25 |
| Accessories | 26 |

WHISTLER FEATURES XTR-540



2

FEATURE DESCRIPTIONS

Whistler's ergonomic and user-friendly design provides a new level of operating convenience. Special features include:

1. **Bracket Release Button** – Provides quick and easy release of the mounting bracket.
2. **Speaker** – Provides distinct audio warnings for X, K, Ka band radar, safety radar, laser and VG-2.
3. **Mounting Bracket Location** – Slot holds mounting bracket firmly.
4. **Radar Antenna** – Compact, high-efficiency antenna receives radar signals.
5. **Front Laser Antenna** – High gain optical lens provides increased sensitivity and field of view for leading-edge laser detection.
6. **Rear Laser Antenna** – An integrated optical waveguide provides superior detection of laser signals transmitted from behind.
7. **City Button** - Reduces the annoyance of false alerts typically encountered in urban driving areas.
8. **Menu Button** - enters Option Select Mode.
9. **Power/BL** -Turns unit on/off and engages Backlight settings (press and hold).
10. **Quiet/Vol Button** – Adjust volume down.
11. **Blue LCD Text Display** – Provides distinct visual confirmation of signals detected, signal strength, and indicates engaged modes of operation.
12. **Power Jack** – Provides connection for the power cord.
13. **Battery Compartment** – Compartment for which you place the rechargeable batteries.

3

INSTALLATION

Battery Installation

Units requires 3 AA rechargeable batteries (included). **Unit must need to be plugged into a live lighter socket to fully charge the batteries overnight before first use!** Remove the battery compartment cover by sliding the cover to the edge of the unit and lift up. Insert batteries and reinstall battery compartment cover.

Ni-MH rechargeable batteries are recommended and are included with the unit.

Note: *DO NOT mix battery types as this can damage the batteries.*

Important: *Use only NiMH batteries. Ni-Cd batteries should not be used.*

Caution: *Only use rechargeable batteries. Charging non-rechargeable batteries can damage the unit or possibly cause the batteries to explode. See battery charging section (page 6) to charge batteries with the power cord.*

Mounting Guidelines

 
- Mount the unit as low as possible near the center of the windshield.
- Do not mount the unit behind wipers, ornaments, mirrored sunscreens, etc. These obstructions have metal surfaces which can affect radar and laser signals and reduce critical warning time. (Regular tinted glass does not affect reception.)
- Some windshields have an Instadclear™ or Electriclear™ type coating, which affect radar signals. Consult your dealer or the vehicle's owner's manual supplied with your vehicle to determine if your windshield has this coating.
- Avoid placing the unit in direct contact with windshield.
- To reduce the possibility of theft, unplug and conceal the unit when not in use.

4

INSTALLATION

Windshield Mounting

- Install the two suction cups and rubber bumper onto the bracket by fitting them into their holes.



- Press the suction cups onto the windshield at the location you have chosen.



- Slide the detector onto the bracket until it locks into place.
- If necessary, the unit may be leveled by bending the windshield bracket.
- Press the bracket release button and remove the detector before bending.

Power Cord Connection

- Plug the small end of the power cord into the unit's power jack.
- Plug the large end into the vehicle's cigarette lighter socket.

 
Note: Cord fits tightly into detector. When installing the cord, expect some resistance.

Fuse Replacement

The lighter socket plug is equipped with a replaceable 2 amp 3AG fuse located behind the silver tip. To replace the fuse, carefully unscrew the tip of the plug.

Important: Unscrew slowly. The tip contains a spring which may fly out when disassembling. Insert the new fuse with the spring and screw on the tip. With use, screw cap on plug may loosen. Retighten occasionally.

Unscrew the tip of the lighter socket plug carefully when replacing the 2 amp fuse.



5

OPERATION

Battery Life

The unit can provide approximately 15 hours of laser/radar detection. There are settings that can maximize battery life.

- 1) Display intensity set to Dim
- 2) Auto Quiet engaged
- 3) Auto Shut Off set to 1 hour
- 4) Using a lower volume setting
- 5) Using Mute whenever possible

Important: The detector's display will flash and three fast beeps will sound when the batteries have approximately one hour of battery life left. This is a reminder to recharge your batteries.

Battery Charging

Power Cord - While traveling, plug your included power cord into your detector and into your lighter socket to slowly charge the rechargeable batteries. This will also provide power to the detector. The display will show an asterisk, i.e., (HIGHER*) when the unit is charging the batteries. The asterisk will flash during charging and go out when charging is complete.

When the power cable is removed from the detector or the vehicle's lighter socket is switched off, the unit will alarm and display (PLUG OUT) then turn off.

Note: As with all battery operated devices, remove the batteries when this unit will not be used for an extended period of time. Damage caused by leaky or improperly charged batteries are not covered under warranty. Check with the battery manufacturer about their specific product warranty and disposal recommendations.

6

OPERATION

Power On and Self-Test

Each time your Whistler detector is turned on, an automatic self-test sequence confirms that the speaker and visual displays are functional.

- Press Power. Display shows in order:

1. WHISTLER 2. X-Band 3. K-Band 4. Ka-Band
5. LASER 6. SR OFF 7. VG2 OFF 8. POP ON
9. Bat Full - This will display the battery status. 10. Filter
11. Combo 11a. Highway

Setting Saver

Setting Saver saves your personalized settings when the detector is turned off or you lose power.

Feature Engaged Confirmation

Each time a button is pressed one beep confirms feature "on", two beeps confirm feature "off".

Audio Level Adjustment

- Press and hold the "Quiet/VOL" button and the volume level will increase then proceed to decrease the volume. Continuing to hold this button will repeat the sequence. As audio level is adjusted, beeps are provided and the display indicates volume level.

Auto Quiet Mode

Auto Quiet reduces the selected audio level to level (1) approximately 5 seconds after a radar or safety radar signal is detected. The alert for any new signal within 20 seconds will resume at level (1). Auto Quiet does not affect VG-2 or Laser alerts.

- Press Quiet/VOL (before a signal is detected) to engage Auto Quiet.
- Press Quiet (when the unit is not alarming) to cancel Auto Quiet mode.

7

OPERATION

Quiet Mode

Quiet cancels audio during an alert and any new alert within 20 seconds. After 20 seconds, approximately 2 beeps are provided on any new alert and unit then remains quiet.

- Press Quiet to cancel the audio.
- Press Quiet a second time during an alert to restore the standard audio alert pattern; or turn the unit off, then on.

Teach/Tutorial Mode

Provides simulated alerts for each type of signal.

- Press City and Quiet/VOL simultaneously and release.
- Display Shows: (TEACH)
- Press Power/BL to exit.

City/City 1/City 2 Mode

Whistler's Three Stage City Mode is designed to reduce the annoyance of automatic door openers, intrusion alarms and other devices which share frequencies with police radar. Generally, X band is used for these devices.

- Press City button to cancel Highway Mode and engage City Mode.
- Press City button again to enter City 1 Mode
- Press City button again to enter City 2 Mode
- Press City button a fourth time cancels City 2 Mode and returns the unit to Highway Mode.

In City Mode, weak speed/safety radar signals give an initial alarm of two beeps, and then remains quiet until the signal becomes very strong. When the signal strength increases, two additional beeps are provided. City 1 and City 2 Modes operate the same as Highway Mode, but in City 1 Mode, only the X band is only reported at high levels. In City 2 Mode, X-band is not detected.

Caution: Some towns/small cities may still be using X band radar. City Modes do not change the audio alert for laser or VG-2.

OPERATION

Highway Mode

Highway mode provides full audio warnings any time radar (X, K, Ka, Safety Radar) or laser signals are detected, and is recommended for open road driving.

For more information on City and Highway mode, please visit our FAQ page on our website: www.whistlergroup.com

Backlight Setting

The backlighting can be programmed to be illuminated all the time, only when alarming. The options are selectable by pressing and holding the Power/Dim button on the unit. The options are:

- OFF-OFF** = Backlight is off during normal operation and off when the unit alarms
- OFF-DIM** = Backlight is off during normal operation and dim when the unit alarms.
- OFF-BRT** = Backlight is off during normal operation and bright when the unit alarms.
- DIM-OFF** = Backlight is dim during normal operation and off when the unit alarms.
- DIM-DIM** = Backlight is dim during normal operation and dim when the unit alarms.
- DIM-BRT** = Backlight is dim during normal operation and bright when the unit alarms.
- BRT-BRT** = Backlight is bright during normal operation and bright when the unit alarms.

Backlight will turn on, if selected, while the unit alarms and remain on for 3 seconds after the unit stops alarming. When any button is pressed, the backlight will illuminate at the dim setting and remain on for 3 seconds afterwards. The backlight will also illuminate while in option mode.

Low Profile Alert Periscopes

Whistler's new Low Profile Alert Periscopes provide an added attention getting visual alert. The two extra LEDs flash on and off when the unit alarms to provide a unique visual alert. This alert can be programmed, through the Option Select Mode to: 1. flash for all alarms, 2. remain on, or 3. turn LEDs off completely.

OPERATION

Compass Calibration

The unit will need to be calibrated in order for the compass to provide accurate headings. To calibrate the unit, perform the following procedure:

1. Mount the unit level in the center of the vehicle's windshield. Make sure there are no magnetic sources near the detector (i.e., speaker).
2. Select a large, clear area (parking lot or field) without any power lines.
3. Press the Menu button until display shows **CAL MODE**. Then press the Dark and Quiet buttons simultaneously. The display shows (scrolling):

(Drive in two complete circles)

4. If calibration does not automatically finish, press the Dark and Quiet buttons simultaneously to complete calibration. The unit will beep twice and display:

(CAL DONE) → (NE 45 H)

Important: If the unit mounting is relocated in the vehicle, (i.e., visor to windshield mounting or dash mounting), or if the unit is moved to another vehicle, you must recalibrate the compass.

VG-2 Mode

See Option Select Mode to turn this feature on/off. When a VG-2 signal is detected, the VG-2 alert is sounded and the display flashes "VG-2". After 3 seconds the audio is canceled and the display no longer flashes. This cycle is repeated if the VG-2 signal is detected again.

During the period a VG-2 signal is detected, a radar signal cannot be detected. However, because the VG-2 alert has confirmed that a patrol car is nearby, you are already aware of the potential for speed monitoring and can adjust your speed accordingly. Laser detection is not affected while a VG-2 signal is detected. (See page 17 for more information)

OPERATION

Auto Shut Off Mode

Auto Shut Off Mode automatically shuts off the detector. The timer is reset:

1. Each time the detector is turned off
2. The optional power cord is unplugged
3. Any button is pressed before the timer has expired.

The detector will alert you with an audible and visual warning before it shuts off. This auto off function can be programmed for the following: Off, 1, 2, or 3 hours. During this warning you can reset the timer by pressing any button. If the unit has automatically turned itself off, press the Power button to turn the unit back on. You can manually engage the Auto Shut Off Mode by pressing and holding the City button until one beep is heard.

Refer to "Option Select Mode" for instructions for changing the Auto Shut Off Mode settings.

Filter Mode

There are times when a radar detector can emit the same frequency as police radar and can cause your detector to falsely alarm. Sometimes a detector can alert when picking up another radar detector in a nearby vehicle. The Whistler Filter Mode options provide for false alert suppression from other radar detectors. Two options exist:

Filter: Allows for normal filtering.

Filter 1: Provides an extra step to analyze the radar that may come from other detectors.

Filter is the factory default and should provide adequate filtering for most conditions. If you experience excessive alerts due to radar detectors in other vehicles, try the Filter 1 option. Filter Mode functions in both Highway and City Modes. See Option Select Mode to change Filter settings.

OPERATION

Option Select Mode

Entering Option Select Mode allows you to customize options such as Tone Select, Abbreviated Power Up Sequence, and VG-2 Mode. Press the Menu button to enter Option Select Mode. When selecting options, the Power/BL or Quiet/VOL buttons must be pressed within 20 seconds or Option Mode will automatically be exited. To enter:

| Press Menu: | Display Shows: | To Change: P=Power/Q=Quiet | Option: |
|-------------|----------------|----------------------------------|--|
| 1st Time | CAL MODE | Press Both P & Q | Starts Compass Calibration |
| 2nd Time | COMBO | P or Q | COMBO = Radar & Compass RADAR = Radar Only / COMPASS = Compass Only |
| 3rd Time | TONE 3 | P or Q | Tone 1, 2, 3 (Three Different Tone Patterns) |
| 4th Time | TEST YES | P = YES Q = OFF | X, K, Ka Audio Tones One Beep During Power Up |
| 5th Time | X-ON | P = ON Q = OFF | X Band On X Band Off |
| 6th Time | K-ON | P = ON Q = OFF | K Band On K Band Off |
| 7th Time | Ka-ON | P = ON Q = OFF | Ka Band On Ka Band Off |
| 8th Time | LASER ON | P = ON Q = OFF | Laser Band On Laser Band Off |
| 9th Time | VG2 OFF | P = ON Q = OFF | Turns VG-2 On Turns VG-2 Off |
| 10th Time | SR OFF | P = ON Q = OFF | Turns Safety Radar On Turns Safety Radar Off |
| 11th Time | POP ON | P = ON Q = OFF | POP On POP Off |
| 12th Time | B SVR 1 HR | P or Q | Options are 1H, 2H, 3H & NO |
| 13th Time | LED BLINK | P or Q | Twin Alert Periscope On (ON, OFF, or Blinking) |
| 14th Time | FILTER | P or Q | Filter Mode Filter 1 Mode |

OPERATION

Stay Alert Feature

The Stay Alert Feature is designed to test a driver's alertness. To engage (when unit is not alarming) :

- Press and hold the City button for approximately 2 seconds. Release button during or immediately after the alert is given. Display shows:

With ~~50-60~~ ⁵⁻⁶ seconds two beeps are sounded; to show alertness, the driver must press either the City, Volume, or Quiet buttons within 3-5 seconds. If a button is pressed within 3-5 seconds, the cycle is repeated.

If a button is not pressed within 3-5 seconds alarm sounds and the display shows:

- Press Power to exit. (GET REST)

WARNING!!! Stay Alert is NOT intended as a substitute for adequate rest. You should NOT operate a vehicle if you are drowsy. During extended periods of vehicle operation, you should take frequent breaks. Improper reliance on the Stay Alert feature may result in vehicle damage, personal injury or death. **NEVER OPERATE A VEHICLE IF YOU ARE DROWSY.**

SWS™

Safety Warning System™

In communities where transmitters are located, the Safety Warning System™ displays over 60 text messages. When Safety Radar is detected, the audio alert sounds like a geiger counter.

Safety Warning System Text

Example: Poor - Road - Surface.

Note: Not all areas have Safety Warning System™ transmitters.

POP™ MODE ALERTS

POP™ Mode Alerts

Because POP™ Mode radar utilizes the same K or Ka band frequencies, POP™ Mode Alerts will be displayed as regular radar alerts.


LASER/RADAR ALERTS

Speed Radar Audio/Visual Alerts

When X, K, or Ka is detected, the band ID and signal strength is displayed. The audio alert is continuous and has a pattern like a geiger counter. The faster the beep, the closer or stronger the radar source.

Laser Audio/Visual Alerts

When a laser signal is detected, the audio alert is continuous for a minimum of 3 seconds.

- The Display Shows: 

Pulse Protection®

Pulse (or instant-on) radar are more difficult to detect than conventional radar because it remains 'off' until activated to measure the speed of a targeted vehicle.

When a pulse type transmission is detected, the Whistler detector sounds an urgent 3-second audio warning and the display shows: 

After the 3-second pulse alert, the standard alert pattern continues for as long as the signal is present.

It is important to respond promptly to a pulse alert, since warning time may be minimal.

VG-2 ALERTS

VG-2 Audio/Visual Alerts

Note: You must turn this feature on before it will detect VG-2.

When a VG-2 signal is detected, the detector 'hides' its own radiated signal and becomes undetectable by the VG-2.

Every 30 seconds, the detector checks for a VG-2 signal. If a VG-2 signal is still present, the unit continues to hide and repeats the VG-2 alert. If no signal is detected, two beeps are provided, indicating an 'all clear' condition. During a VG-2 Alert X, K, and Ka band signals cannot be received (Reference page 21 for VG-2 information).

Alert Priority

When two or more signals are received at the same time, the alert priority is:

1. Laser
2. VG-2
3. Speed Radar
4. Safety Radar

Example:

If X band is alerting, then suddenly a VG-2 signal is detected, the VG-2 warning will override the X band alert.

RESET FEATURES

Reset Features

All user features can be reset to factory settings.

- Unplug the Power Cord from the unit.
- Remove the Batteries.
- Press and hold the Power and Quiet.
- Plug the Power Cord into the unit.
- Wait for 2 beeps.
- Release the Power and Quiet buttons.

Unit is now reset to the following features and settings.

Default factory settings are:

1. Audio to level (4).
2. Highway/Combo Mode.
3. Auto Quiet Mode OFF.
4. VG-2 Detection Mode OFF.
5. Safety Radar OFF.
6. Vehicle Battery Saver to 1 hour.
7. Full Power Up sequence.
8. Default TONE 3.
9. POP ON.
10. Backlighting Dim/Bright

TROUBLESHOOTING

Your Whistler detector is expertly engineered and designed to exacting quality standards to provide you with reliable, trouble-free operation. If your unit has been correctly installed following the guidelines in this manual, but is not operating optimally, please refer to the troubleshooting guide below.

PROBLEM: No display or audio.

- Make sure the batteries are installed with the correct polarity.
- Make sure the batteries are fully charged.
- Make sure the battery contacts are clean.
- Check the fuse in the plug; replace if necessary with a 2 amp 3AG type.

TROUBLESHOOTING

- Check the fuse for lighter socket; replace if necessary.
- Make sure the lighter socket is clean.

PROBLEM: Unit alarms when vehicle hits bumps.

- Make sure the batteries are seated properly.
- Make sure that the battery door is fully closed.
- Make sure the battery contacts are clean.
- Check for the loose lighter socket; tighten and clean.
- Check the connections at both ends of the power cord. Substitute another cord to determine if the cord is defective. Return defective cord to the factory.

PROBLEM: Audio alerts are not loud enough.

- Cancel Auto Quiet Mode or City Mode.
- Check audio level setting (see page 7).

PROBLEM: Low Battery Life.

- One or more of the batteries may be defective.
- See the battery life tips on page 6.

If difficulties occur which cannot be solved by information in this Troubleshooting Guide, please call Whistler Customer Service at 1-800-531-0004 or visit our FAQ page at www.whistlergroup.com/faq-detectors.asp, before returning your unit for service.

PROBLEM: Unit turns itself off

- See battery saver feature on page 11

CARE AND MAINTENANCE

Care And Maintenance

During the summer months, avoid prolonged exposure to direct sunlight by removing your unit from the dash when your vehicle is parked for an extended period of time. Do not spray water, cleaners, or polishes directly onto the unit. The spray may penetrate through the openings and damage the unit. Also, do not use any abrasive cleaners on the unit's exterior.

As with all battery operated devices remove the batteries when the unit will not be used for an extended period of time. Damage caused by leaky or improperly charged batteries are not covered under warranty.

ARE DETECTORS LEGAL?

In Most States YES!

Laser-Radar detectors are legal in every state (with the exception of Virginia and Washington, D.C., which have local regulations restricting the use of radar receivers in any vehicle) when used in automobiles or light trucks (under 10,000 lbs.).

The Federal Highway Administration (FHWA) issued a regulation, effective January, 1994 which prohibits radar and laser detector use in vehicles over 10,000 pounds nationwide. Prior to the FHWA regulation, laws existed in the state of New York restricting the use of radar detectors in trucks over 18,000 lbs. and in Illinois in trucks over 26,000 lbs.

FCC INFORMATION

FCC ID : HSXWH15

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Important: FCC (Federal Communications Commission) requirements state that changes or modifications not expressly approved by Whistler could void the user's authority to operate the equipment.

SPEED MONITORING

Radar Facts

A radar gun operates by transmitting radio waves at certain frequencies which reflect off objects and are picked up by the radar gun's receiving section. When a radar beam reflects off a moving target, a measurable frequency shift occurs. The radar unit converts this shift into miles per hour to determine your vehicle's speed. Currently, the FCC permits operation of traffic radar guns at X Band (10.500 - 10.550 GHz), K Band (24.050 - 24.250 GHz), and Ka Band (33.400 - 36.000 GHz).

Note: A radar detector will not alarm if an officer is not transmitting on any one of the above radar bands.

POPTM Mode

POP™ Mode is a feature on some newer radar guns operating on K and Ka bands. When the gun is in POP™ Mode and activated, a brief burst of energy, less than 1/15 of a second, is transmitted and the vehicle's speed is quickly acquired. A detector without POP™ Mode detection capability cannot respond to this brief transmission.

SPEED MONITORING

Total Band™ Protection

Detects all laser and radar bands, VG-2 and safety radar.

Laser Facts

It's well documented that many radar guns cannot reliably provide the speed of a targeted vehicle that is traveling in a group of vehicles. In contrast, a laser gun can target a specific vehicle out of a line of traffic and determine its speed. The advantage of laser over radar in terms of target identification is the result of the laser gun's narrow beam. A radar gun's transmission can cover more than a four-lane highway at a distance of 1,000 feet, compared with a laser gun's transmission which covers about 3 feet at the same distance. For best protection, keep these points in mind:

- Because the vehicle's license plate or headlights are the laser gun's primary targets, mounting the Whistler detector on the dashboard can improve laser detection at short range.
- Do not follow closely behind any vehicle. If you can't see past a vehicle ahead of you, chances are your detector won't either.
- The receiving range of your laser detector will not be the same as a radar detector. Laser guns are most often used at short range.

Whistler Laser-Radar detectors receive all current laser guns which operate at a laser wavelength of 905 +/- 10mm.

SPEED MONITORING

Laser Tips

If you are the targeted vehicle, a laser gun can often determine your speed within a few seconds after you receive an alert. In this situation, there is generally no time to safely adjust your speed. However, if you are traveling near or behind the targeted vehicle, and receive an alert, response time should be sufficient. Any laser alert, regardless of duration, requires immediate action!

Other Speed Detection Systems

Several techniques other than radar or laser are used to measure vehicle speeds. When these methods are being used, no detector can provide a warning. These techniques include:

- **Pacing** - A patrol car drives behind you and matches your driving speed.
- **Vascar/Aircraft** - The time it takes a vehicle to travel a known distance is measured.

Radar Detector Detectors: VG-2, Spectre

The Interceptor VG-2 or simply VG-2, is one type of microwave receiver used by Police to detect signals radiated by the local oscillator of a radar detector. Because its purpose is to identify persons driving with radar detectors, these devices are known as a "radar detector detector" (RDD).

An RDD is the primary tool used by the police to identify radar detector equipped vehicles. If caught in a state or country where detectors are illegal (see page 18), drivers risk losing their radar detector and receiving a fine. In addition, instant-on radar is almost always used in combination with an RDD, leaving unsuspecting motorists vulnerable to receive two tickets - one potentially for speeding, the other for possession of a detector.

SPEED MONITORING

Note: Having a radar detector capable of detecting the VG-2 may alert you to the presence of a speed trap. The newest tool Police have to detect radar detectors is called Spectre. As of this printing, Spectre can detect most undetectable (VG-2) laser/radar detectors on the market.

It is the responsibility of the individual radar detector owner to know and understand the laws in your area regarding the legality of the use of radar detectors.

WARRANTY INFORMATION

Consumer Warranty

This Whistler Laser-Radar detector is warranted to the original purchaser for a period of one year from the date of original purchase against all defects in materials and workmanship. This limited warranty is void if the unit is abused, modified, installed improperly, or if the housing and/or serial numbers have been removed. There are no express warranties covering this product other than those set forth in this warranty. All express or implied warranties for this product are limited to the above time. Whistler is not liable for damages arising from the use, misuse, or operation of this product.

Note: Damaged caused by incorrect battery placement or battery leakage is not covered under this warranty.

WARRANTY INFORMATION

Service Under Warranty

During the warranty period, defective units will be repaired without charge to the purchaser when returned with a dated store receipt to the address below. Units returned without a dated store receipt will be handled as described in section

"Service Out Of Warranty."

Due to the specialized equipment necessary for testing a Laser-Radar receiver, there are no authorized service stations for Whistler brand detectors other than Whistler.

When returning a unit for service under warranty, please follow these instructions:

1. Ship the unit in the original carton or in a suitable, sturdy equivalent, fully insured, with return receipt requested to:

Whistler Repair Dept.
551 N 13th St.
Rogers, AR. 72756

Please allow 3 weeks turnaround time.

Important: Whistler will not assume responsibility for loss or damage incurred in shipping. Therefore, please ship your unit insured with return receipt requested. **CODs will not be accepted!**

2. Include with your unit the following information, clearly printed:
 - Your name and street address (for shipping via UPS), a daytime telephone number and an email address, if applicable.
 - A detailed description of the problem (e.g., "Unit performs self-test but does not respond to radar").
 - A copy of your dated store receipt or bill of sale.

23

WARRANTY INFORMATION

3. Be certain your unit is returned with its serial number. For reference, please write your unit's serial number in the following space:
s/n _____

Units without serial numbers are not covered under warranty.

Important: To validate that your unit is within the warranty period, make sure you keep a copy of your dated store receipt. You may register your warranty online at www.whistlergroup.com, however, for warranty verification purposes, a copy of your dated store receipt must accompany any unit sent in for warranty work.

Service Out of Warranty

Units will be repaired at 'out of warranty' service rates when:

- The unit's original warranty has expired.
- A dated store receipt is not supplied.
- The unit has been returned without its serial number.
- The unit has been abused, modified, installed improperly, or had its housing removed.

The minimum out of warranty service fee for your Whistler detector is \$55.00 (U.S.). If you require out of warranty service, please return your unit as outlined in the section "Service Under Warranty" along with a certified check or money order for \$55.00. Payment may also be made by MasterCard, VISA or American Express; **personal checks are not accepted.**

In the event repairs cannot be covered by the minimum \$55.00 service fee, you will be contacted by a Whistler technical service specialist who will outline options available to you.

If you elect not to have your unit repaired, it will be returned to you along with your certified check or money order.

24

WARRANTY INFORMATION

Important: When returning your unit for service, be certain to include a daytime telephone number and an email address (if applicable).

Customer Service

If you have questions concerning the operation of your Whistler detector, or require service during or after the warranty period, please call Customer Service at:

1-800-531-0004

Representatives are available to answer your questions Monday - Friday from 8:00 a.m. to 5:00 p.m. (CT) or visit the FAQ's at www.whistlergroup.com.

SPECIFICATIONS

Laser Wavelength:

905 ± 50 nanometers (nm)

Radar Frequencies:

10.500 - 10.550 GHz (X Band)
24.050 - 24.250 GHz (K Band)
33.400 - 36.000 GHz (Ka Superwideband)

Operating Temperature Range: -10° C to +70° C
(14° F to +158° F)

Power Requirements:

3 AA Ni-MH batteries 1.2 volts each.
Operational 12 to 15 volts DC, 250mA nominal with power cord.

These U.S. patents apply:

#5,666,120, #7,215,276

POP™ Mode is a trademark of MPH Industries, Inc.
SWS™ is a trademark of Safety Warning System L.C.

CE Specifications are subject to change without notice.

25

ACCESSORIES

These and other accessories can be ordered directly from Whistler by calling **1-800-531-0004** or visit our online store at www.whistlergroup.com

| Order # | Description | Price |
|---------|---|---------|
| 600111 | Home Battery Charger | \$ 9.95 |
| 500501 | Zipped Travel Case | \$ 9.95 |
| 202152 | Large Windshield Bracket Kit | \$9.95 |
| 206552 | Straight Power Cord (5') | \$14.95 |
| 206553 | Coiled Power Cord (7') | \$15.95 |
| 206880 | Hardwire Kit (10') (for wiring to fuse box) | \$9.95 |
| 206666 | Modular* Cord Package (includes coiled and straight cords, and power adapter) | \$17.95 |
| 202156 | Package of 4 Suction Cups | \$2.95 |
| 402081 | Non Skid Dash Pad | \$6.95 |
| 206660 | Straight Modular Cord & Socket Multiplier | \$11.95 |
| 206661 | Coiled Modular Cord & Socket Multiplier | \$12.95 |

* Modular: Interconnecting pieces cord and plug.
Shipping and handling (per order) \$5.00 . Prices are subject to change without notice.

26