


ICOM INSTRUCTIONS

BELT HANGER MB-96N

■ Supplied items

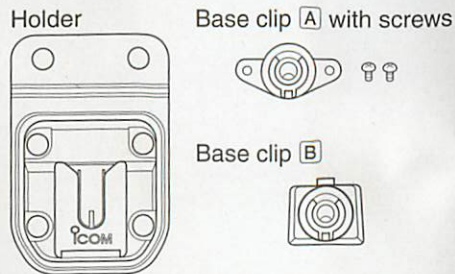

■ Applicable transceivers

The MB-96N is designed for the following Icom transceivers depending on the base clip;


w/Base clip A	<ul style="list-style-type: none"> • IC-F11/S series • IC-F3GT/GS series • IC-F30GT/GS series • IC-F41GT/GS MT series • IC-F50 series • IC-M87/M88 • IC-A24/A6 series • IC-V8/T3H
w/Base clip B	<ul style="list-style-type: none"> • IC-F14/S series • IC-F43TR • IC-F33GT/GS series

*The MB-96N will also be compatible with future transceiver models.


Thank you for purchasing the MB-96N BELT HANGER. The MB-96N allows a transceiver to be attached to your belt with swivel capability, reducing interference during operation.

■ Fitting the holder on your belt

Pass the belt through the leather loop on the back of the holder.

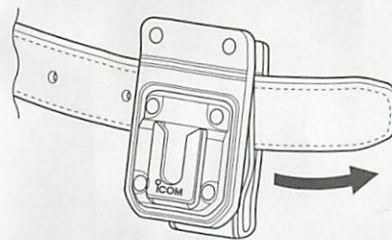

For your information!

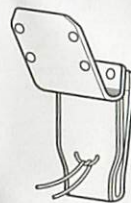


When fitting the holder using a narrow belt, the holder may be easily lifted up with the transceiver when detaching the transceiver.


To reduce this play, fasten with string, wire etc. through the holes as shown at left.

■ Base clip attachment


• Base clip **A**

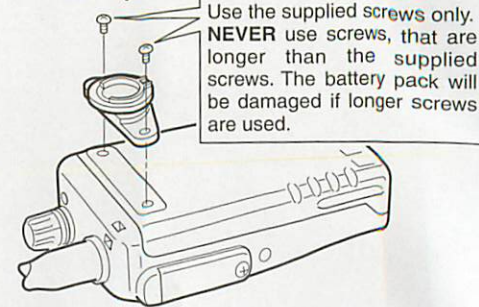

• Base clip **B**

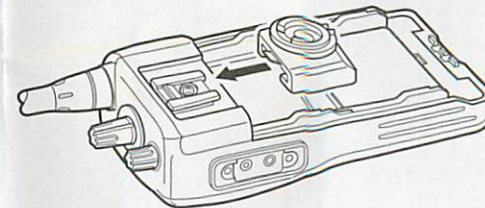


◇ Attaching the transceiver

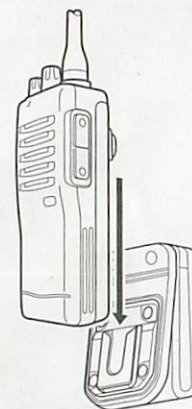

Insert the transceiver into the holder until the base clip fits into the groove.


◇ Detaching the transceiver

Turn the transceiver upside down in the direction of the arrow and pull out from the holder.

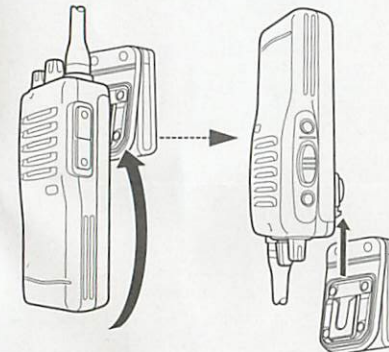

◇ Transceiver swivel motion

Once the transceiver is locked in place, it will swivel as illustrated below.

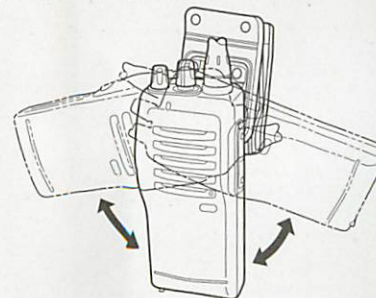

NOTE:
HOLD THE TRANSCEIVER TIGHTLY, WHEN HANGING OR DETACHING THE TRANSCEIVER FROM THE HOLDER. Otherwise the transceiver may not be attached to the holder or swivelled properly if the transceiver is accidentally dropped and the base clip is scratched or damaged.