

Cobra[®]

Operating Instructions for Your
Cobra[®] 10 Band[™] Extra Sensory Detection[®]

RADAR/LASER DETECTOR

MODEL ESD - 9160

10 BAND[™]



Nothing comes close to a Cobra[™]



RADAR/LASER DETECTOR

MODEL **ESD-9160**

Congratulations

You've made a smart choice by purchasing the ESD-9160 radar/laser detector from Cobra.[®] Just look at some of the sophisticated features and capabilities your new unit includes:

- Detects and provides separate alerts for:
 - radar signals (X, K, and Ka bands, with signal strength indicated)*
 - laser signals*
 - emergency vehicle safety and strobe alert signals*
 - VG-2 signals*
- **8-POINT COMPASS** displays direction of travel
- **LASEREYE[®]** for 360° detection of laser and strobe signals

- **"INSTANT-ON"** speed monitoring detection
- **• TONE ALERTS** with adjustable volume
- **ULTRABRIGHT[™] DATA DISPLAY** is easy-to-read with adjustable brightness
- **CITY** or **HIGHWAY** modes to reduce false alerts
- **SAFETY ALERT[®]** Traffic Warning System
- **STROBE ALERT[™]**
- **MANUAL MUTE** or **AUTO MUTE** of audio alerts

- **SMARTMUTE[™]** a mute function which automatically reduces false alerts by sensing engine RPMs
- Distinguishes important safety alerts, from other K band signals
- Mounts easily on windshield or dashboard

This booklet describes the simple steps for mounting and setting up your ESD-9160. It also provides helpful information about how radar and laser guns are used and how you can interpret the alerts you receive.


12V DC POWER JACK

ON-OFF/VOLUME control allows you to adjust the volume of the TONE alerts.

SMARTMUTE[™] engine RPM-sensing mute function which reduces false alerts. Button turns SmartMute[™] on and off. (Also sets rev point:*)

MUTE button for MANUAL MUTE or AUTO MUTE of audio alerts.


DIM button allows you to adjust the UltraBright[™] Data Display brightness for easy reading. (Also turns VG-2 Alert[®] on and off:*)

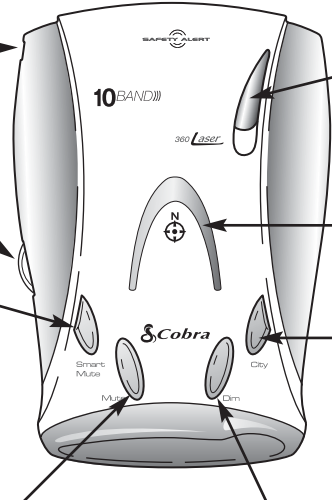

LASEREYE[®] for 360° detection of laser and strobe signals.


SPEAKER

CITY button for CITY or HIGHWAY modes to reduce false alerts. (Also used to calibrate compass:*)

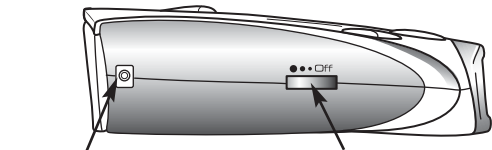

12V DC POWER JACK

ON-OFF/VOLUME control

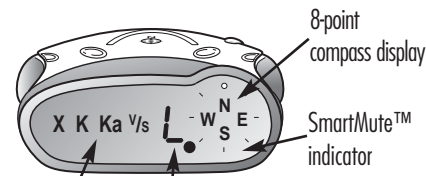


8-point compass display

SmartMute[™] indicator

radar, VG-2 and safety/strobe indicators

signal strength, laser and CITY/HIGHWAY mode indicators

windshield bracket mount

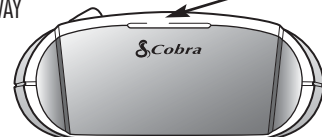

*Press and hold for 2 seconds to access these secondary functions

Table of Contents

Important information about...	
Federal Laws, Safety Alert [®] /Strobe Alert [™] , Safe Driving, Security of Your Vehicle, Customer Support.....	
A1	
1	Installation 2-4
2	Operation—Getting Started 5
3	Operation—Settings 6-12
	Highway/City Mode 6
	UltraBright [™] Data Display Brightness 7
	Muting an Alert 8
	Auto Mute Mode 8
	SmartMute [™] 9-11
	VG-2 Alert [®] Audio Setting 12
	Compass 13
4	Detection 14-17
	Signals Detected 14
	Audio Alerts 14
	Visual Display 14-16
	Instant-On Detection 17
	Responding to Alerts 17
5	Understanding Radar and Laser 18-19
6	Maintenance and Service 20-21
7	Limited 1-Year Warranty 22
8	Specifications 23
9	Optional Accessories 24
10	Order Form 25

Important Information

Important information about...

Federal Laws Governing the Use of Radar Detectors

It is not against federal law to receive radar transmissions with your Cobra[®] radar detector. The Communications Act of 1924 guarantees your right to receive radio transmissions on any frequency. Local laws that contravene this Act, while illegal, may be enforced by your local law enforcement officials until and unless they are prohibited from doing so by federal court action.

Safety Alert[®] and Strobe Alert[™]

Use of this product is not intended to, and does not, ensure that motorists or passengers will not be involved in traffic accidents. It is only intended to alert the motorist that an emergency vehicle equipped with a 3M Corporation Opticom[™] or Tomar[®] preemption system, or a Cobra[®] Safety Alert[®] transmitter is within range as defined by that product. Please call local fire and police departments to learn if coverage exists in your area.

Safe Driving

Motorists, as well as operators of emergency or service vehicles, are expected to exercise all due caution while using this product, and to obey all applicable traffic laws.

Security of Your Vehicle

Before leaving your vehicle, always remember to conceal your radar detector in order to reduce the possibility of break-in and theft.

Customer Support

In this user's manual, you should find all the information you need to install and operate your ESD-9160. If you require further assistance after reading through this manual, Cobra[®] Electronics offers the following customer support services:

Automated Help Desk is available 24 hours a day, 7 days a week at 773-889-3087.

Customer Service Operators are available at 773-889-3087 Monday through Friday, 8:00 a.m. to 6:00 p.m. CST.


Questions can be faxed to 773-622-2269.

Automated Technical Assistance is available 24 hours, 7 days a week via e-mail at: productinfo@cobra.com


On-line answers to frequently asked questions can be found at: www.cobra.com.

Where to Mount Your Unit

You will get optimum performance from your ESD-9160 if you mount it at a point approximately in the center of the vehicle, as low as possible on the front windshield without obstructing the unit's view of the road either to the front or rear. You can also mount it directly on the dashboard.

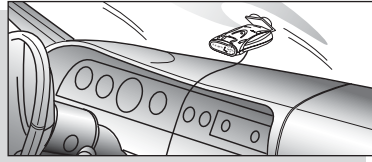


Windshield mounting

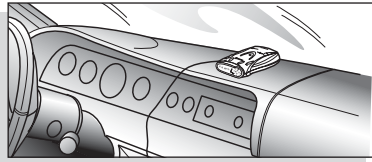

Dashboard mounting

The unit's lenses must not be blocked and the LaserEye® should have a clear view out the back window to allow 360° detection.

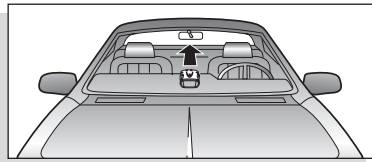


Radar and laser signals pass through glass but not through other materials and objects. Objects that can block or weaken incoming signals include:

- ▶ windshield wiper blades
- ▶ mirrored sun screens
- ▶ dark tinting at the top of the windshield
- ▶ heated windshields currently available on some vehicles (*Instaclear for Ford®*, *Electriclear for GM®*, consult your dealer to see if you have this option)


Windshield Mounting

1. Attach the rubber cups to the bracket.

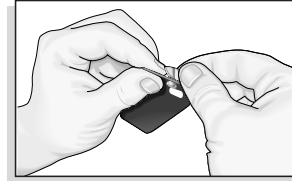


2. Make sure the rubber cups and your windshield are clean.

3. Push the bracket firmly onto the windshield.

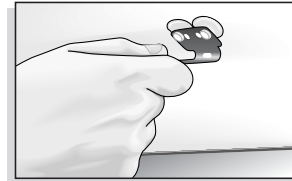


4. Attach the detector to the bracket. Check the angle of the unit.

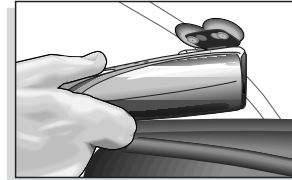


5. To adjust the angle if necessary, gently push or pull on the bracket to bend it. **DO NOT** use the detector to bend the bracket.



6. Plug the power cord into the detector.

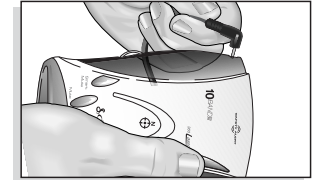


7. Plug the cigarette lighter adapter on the power cord into your vehicle's cigarette lighter.

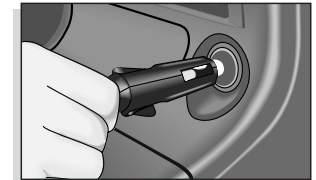



8. You can temporarily remove the detector whenever you wish by sliding it off of the bracket.

Dashboard Mounting


1. Place the detector on the dashboard to find a location where the unit has a clear, level view of the road. The angle can NOT be adjusted after mounting.
2. Remove the paper backing from one side of the hook-and-loop fastener.

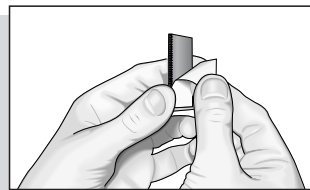


3. Attach the pad to the dashboard at your chosen location and remove the other paper backing.

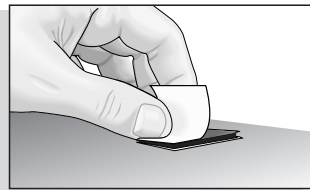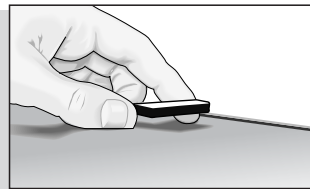


4. Attach the detector to the hook-and-loop fastener. You can remove and reattach the unit as often as you like.

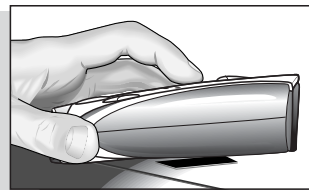


5. Plug the power cord into the detector.

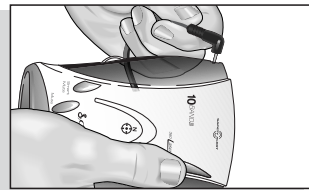


6. Plug the cigarette lighter adapter on the power cord into your vehicle's cigarette lighter.

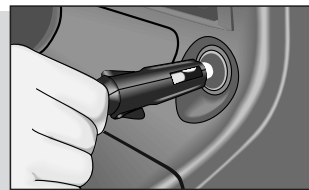

1. Turn on the unit and adjust audio volume by rotating the **ON-OFF/VOLUME CONTROL DIAL** clockwise (away from you).

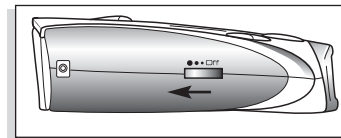

2. You will hear 3 beeps and the letter "h" will appear in the display indicating that the power is on.

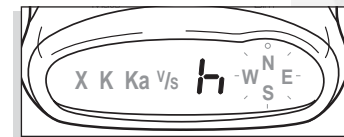

NOTE: In some vehicles, power is supplied to the cigarette lighter even while the ignition is off. If this is the case with your vehicle, you should turn off or unplug your ESD-9160 when parking for lengthy periods.

When changing the settings on your ESD-9160, please keep in mind:

- Buttons can have multiple functions.
- All settings will be stored in memory when the power is turned off and recalled when the power is turned back on.


Highway/City Mode

Setting your ESD-9160 to City mode delays all X band audio alerts until the signal strength reaches level 3. (A single beep will sound when the signal is first detected.) This will reduce false alerts while you are driving in or near urban areas where there are many sources for conflicting X band



signals such as microwave towers and automatic door openers.

To change settings, follow the procedure in the table below, which indicates what you will see and hear as you complete each step.

The factory setting is Highway mode.

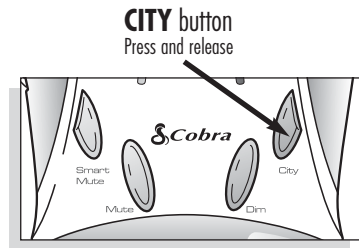

	Procedure	Tone	Visual Display
▶ To change from Highway mode to City mode	Press and release the CITY button.	1 beep	C appears in the display
▶ To change from City mode back to Highway mode	Press and release the CITY button again.	2 beeps	h appears in the display




UltraBright™ Data Display Brightness


You can choose from three settings for brightness of the display.

You can cycle through the settings by repeatedly pushing the DIM button

The factory setting is Bright.

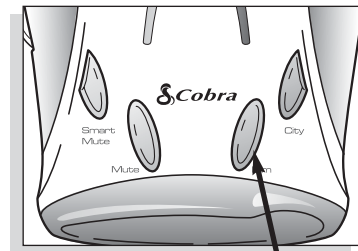

DIM button
Press and release

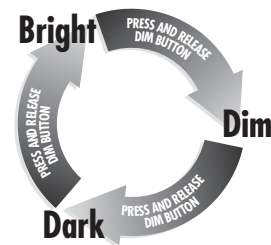

	Procedure	Tone	Visual Display
▶ To change the brightness to Dim	Press and release the DIM button once.	1 beep	Display dims
▶ To change the brightness to Dark	Press and release the DIM button again.	1 beep	Display remains dim (No visual alerts will be seen)
▶ To change the brightness to Bright	Press and release the DIM button a third time.	2 beeps	Display returns to full brightness


Muting an Alert

Your ESD-9160 allows you to quickly turn off an audio alert by momentarily pressing the MUTE button. If you press the MUTE button a second time during the alert, the audio alert will be turned back on.

Auto Mute Mode

Auto Mute will automatically reduce the audio volume of all alerts after 4 seconds for as long as the signal is detected.

The factory setting for Auto Mute is ON.

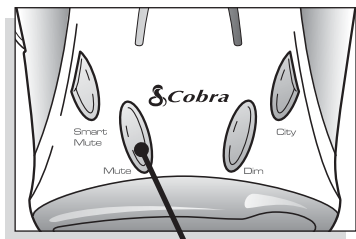

MUTE button
Press and release

	Procedure	Tone	Visual Display
▶ To turn Auto Mute off	Press and release the MUTE button while no alert is occurring.	1 beep	none
▶ To turn Auto Mute on	Press and release the MUTE button again while no alert is occurring.	2 beeps	none

SmartMute™


SmartMute™ is a unique new feature of the ESD-9160 that allows you to avoid alerts you don't need to hear because you are stopped or moving slowly. By sensing the "revs" (RPMs) of your engine, SmartMute™ knows when you are at low speed and automatically mutes alerts (except for strobe signals from emergency vehicles).

Before SmartMute™ will work, you must set an activation point for your engine's revs (see page 11). Whenever the revs are below that point, SmartMute™ will begin muting. The activation point will be stored


in memory and recalled each time the power is turned on.


The factory setting is SmartMute™ OFF.

NOTE: SmartMute™ may not work with some vehicles because it cannot sense the engine's revs. In such cases, you can reduce unwanted audio alerts by using Auto Mute and City mode when appropriate.

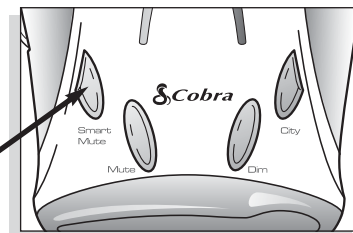

SMARTMUTE™ button
Press and release

	Procedure	Tone	Visual Display
▶ To turn SmartMute™ on	Press and release the SMARTMUTE™ button.	2 beeps	dot appears next to the large character on the right 
▶ To turn SmartMute™ off	Press and release the SMARTMUTE™ button again.	1 beep	none



What to Remember While Using SmartMute™

SmartMute™ works with both City and Auto Mute modes.

Whenever your engine revs are below the activation point, the dot next to the large character on the right side of the display will remain lit. Above the activation point, the dot will blink twice every 2 seconds.



If, for any reason, the unit stops sensing your engine's revs, SmartMute™ will indicate an error and automatically turn off.

The rev point you set will be stored in the unit's memory when power is turned off, and recalled each time the power is turned on.

The rev point must be reset if you use your ESD-9160 in a different vehicle.

Important: When initially choosing your SmartMute™ activation point, a setting of approximately 300 to 600 RPMs above idle is recommended. You can reset the activation point at any time to fit your individual preferences and driving style.

Setting the SmartMute™ Activation Point

Your ESD-9160 must be installed in your vehicle.

Caution: Do not attempt to set the rev point while driving. Your vehicle should be *parked* and *idling*.

SmartMute™ must be turned on.


You will hear a series of beeps as you follow these steps:

- | Procedure | Tone | Visual Display |
|--|---------|----------------|
| Press and hold the SMARTMUTE™ button for 2 seconds. | 2 beeps | none |
- | Procedure | Tone | Visual Display |
|---|-----------------------|---|
| Rev your engine to the level you wish to set. Rev the engine slightly above idle and hold revs steady for 2 seconds. | none | three bars flash in succession
1
2
3 |
| NOTE: If the unit is unable to sense usable pulses within three seconds, SmartMute™ will indicate an error and automatically turn off. | Tone
1 beep | Visual Display
appears |
- | Procedure | Tone | Visual Display |
|--|-----------------------|--------------------------------------|
| At the desired rev level, press and release the SMARTMUTE™ button. | 3 beeps | all three bars flash three times
 |
| NOTE: If you do not set a rev point within 20 seconds of beginning these steps, SmartMute™ will indicate an error and automatically turn off. | Tone
1 beep | Visual Display
appears |

VG-2 Alert® Audio Setting


The ESD-9160 is undetectable by police VG-2 detection devices, and will alert you when such a device is in use near your vehicle. During the alert, the unit continues to detect other signals. You can choose whether or not you want your unit to sound VG-2 alerts.

The factory setting is VG-2 Audio On.

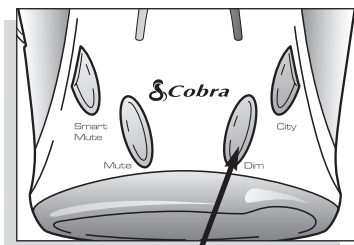

DIM button
Press and hold for 2 seconds

	Procedure	Tone	Visual Display
▶ To turn off VG-2 audio alert	While no signal is being detected, press and hold the DIM button for two seconds.	1 beep	V/S will blink once in the display
▶ To turn on VG-2 audio alert	While no signal is being detected, press and hold the DIM button for two seconds again.	2 beeps	V/S will blink twice in the display.



Compass

Your ESD-9160 includes an internal 8-point compass that will continuously display your current direction of travel: N, NE, E, SE, S, SW, W, or NW.

Calibrating the Compass

Important: Before using it for the first time, you must calibrate the compass to provide accurate indications of direction.

Calibration allows the compass electronics to measure and store information about the magnetic fields generated by your vehicle.

The compass will remain accurately calibrated as long as your ESD-9160 is mounted in the same place in your vehicle. If you change the location where the unit is mounted or move it to another vehicle, you must recalibrate the compass.

The compass temporarily may not provide accurate readings if you are inside a building or enclosure, or are close to a large metal tractor/trailer, truck, or train. Once you are away from such a location, the compass will work correctly again.

1.

Procedure	Tone	Visual Display
Press and hold the CITY button for at least 2 seconds.	1 beep	directional display begins flashing clockwise



2.

Procedure	Tone	Visual Display
Within 60 seconds, drive your vehicle in a circle twice, then press the CITY button again.	2 beeps	directional display flashes twice, then shows the direction of travel



NOTE: If you do not press the **CITY** button the second time within 60 seconds, compass calibration will automatically terminate.

Tone
3 beeps

Visual Display
directional display flashes twice, no direction of travel is shown



Signals Detected

The tables on the following pages show you the types of signals your ESD-9160 will detect, as well as the visual alerts it provides for each one.

Audio Alerts

A distinctly different alert tone is used for each type of signal detected (including separate tones for each laser signal). For X, K, and Ka band radar signals, the tones will repeat faster as you approach the signal source. The repeat rate of the tones gives you useful information about the signal detected. (See Responding to Alerts, page 16.)

Visual Display

An indication of the type of signal detected will appear in the UltraBright™ Data Display. During X, K and Ka alerts, a number will also appear, indicating the strength of the signal detected. (1 = weakest, 5 = strongest)




During laser alerts the letter "L" will appear, instead of the signal strength indication.



During VG-2 Alert®, Safety Alert® and Strobe Alert™ the letters "V/S" will appear.



	Type of Signal	Visual Display
Radar	X band radar K band radar Ka band radar	X plus signal strength K plus signal strength Ka plus signal strength



	Type of Signal	Visual Display
Laser*	LTI 20-20™* LTI Ultra-Lyte™* Kustom Signals ProLaser™* Kustom Signals ProLaser III™*	L L L L

PLEASE NOTE: *Beep rate changes with different laser alerts*



	Type of Signal	Visual Display
Strobe Alert™*	3M Opticom™ or Tomar®	V/S



* your ESD-9160 provides LaserEye® 360° detection of these signals

Type of Signal	Visual Display
Safety Alert®	emergency vehicles road hazards trains



Type of Signal	Visual Display
VG-2 Alert®	Interceptor VG-2™



Instant-On Detection

Your ESD-9160 is designed to detect instant-on speed monitoring signals, which can suddenly appear at full strength.

You should take appropriate action immediately whenever an alert is given.

Responding To Alerts

Description	Interpretation	Recommended Response
tone repeats slowly at first, then speeds up rapidly	probably police radar	FULL ALERT
tone sounds one time only	probably a false alarm, but possibly pulsed radar	exercise caution
tone instantly begins repeating rapidly	radar or VG-2 nearby has been activated suddenly	FULL ALERT
tone repeats slowly as you approach a hill or bridge, then speeds up sharply as you reach it	probably police radar beyond the hill or bridge	FULL ALERT
tone repeats slowly for a short period	probably a false alarm	exercise caution
any type of laser alert	laser alerts are never false alarms	FULL ALERT
any Safety Alert® or Strobe Alert™	you are nearing an emergency vehicle, railroad crossing, or road hazard (construction, accident, etc.)	exercise caution

20-20™ and Ultra-Lyte™ are trademarks of Laser Technology, Inc.

ProLaser™ and ProLaser III™ are trademarks of Kustom Signals, Inc.

10 Band™, Strobe Alert™ and SmartMute™ are trademarks of Cobra Electronics Corporation.

Safety Alert® Traffic Warning System, VG-2 Alert® and LaserEye® are registered trademarks of Cobra Electronics Corporation.

Opticom™ is a trademark of 3M Corporation.

Tomar® is a registered trademark of TOMAR Electronics, Inc

Interceptor VG-2™ is a trademark of TechniSonic Industries LTD.

Radar Speed Monitoring Systems

Three band frequencies have been approved by the Federal Communications Commission (FCC) for use by speed monitoring radar equipment:

X band 10.525 GHz

K band 24.150 GHz

Ka band 33.400-36.00 GHz

Your ESD-9160 detects signals in all three radar bands.

VG-2

VG-2 is a "detector detector" that works by detecting low-level signals emitted by most radar detectors. Your ESD-9160 does not emit signals that can be detected by VG-2, but does detect VG-2 signals and will alert you when a device is in use near your vehicle.

Safety Alert® Traffic Warning System



FCC-approved Safety Alert® transmitters emit

microwave radar signals that indicate the presence of a safety-related concern. Depending on the frequency of the signal emitted, it can indicate a speeding

emergency vehicle or train, or a stationary road hazard.

Because these microwave signals are within the K band frequency, most conventional radar detectors will detect Safety Alert® signals as standard K band radar. Your ESD-9160, however, is designed to differentiate between standard K band and Safety Alert® signals, and give separate alerts for each.

Safety Alert® technology is relatively new. Safety Alert® transmitters can be found in limited numbers in all 50 states, but the number is growing. Depending on your location, you may not receive these alerts regularly and may often encounter emergency vehicles, trains, and road hazards without being alerted. As the number of transmitters increases, these alerts will become more common.

When you receive such an alert, please watch for emergency vehicles ahead of you, on cross streets, and behind you. If you see an emergency vehicle approaching, please pull over to the right side of the road and allow it to pass.

Strobe Alert™

Special strobes mounted on the light bars of authorized emergency vehicles (fire trucks, police cars, ambulances) automatically change traffic signals as the vehicle approaches an intersection. These strobes and the special strobe detectors located on the traffic signals, introduced fairly recently by 3M and Tomar, are already in use in more than 1000 cities nationwide. Cobra's exclusive Strobe Alert™ detector will detect these special strobes and give an Emergency Vehicle alert.

When you receive such an alert, please watch for an approaching emergency vehicle and pull over to allow it to pass. To inquire about coverage in your area, contact your local fire and police departments.

LIDAR (laser)

The correct name for the technology that most people refer to as laser is actually LIDAR, which stands for Light Detection and Ranging.

LIDAR operates much like radar. Its signal spreads out like a radar signal, though not as quickly. Unlike radar, LIDAR must have a clear line of sight to its target vehicle throughout the entire measurement interval. Obstructions such as sign posts, utility poles, tree branches, etc., will prevent valid speed measurement.

Some common questions about LIDAR include:

Does weather have any affect on LIDAR?

Yes. Rain, snow, smoke, fog, or airborne dust particles will reduce the effective range of LIDAR and can, if dense enough, prevent its operation.

Can LIDAR operate through glass?

Yes. Newer LIDAR guns can obtain readings through most types of glass.

However, the laser pulse also can be received through glass to trigger an alarm by your ESD-9210.

Can LIDAR operate while in motion?

No. Because LIDAR operates by line of sight, the person using it cannot drive the vehicle, aim, and operate the gun all at the same time.

Is LIDAR legal to use?

Yes. It is legal in all 50 states.

Maintenance of Your Radar Detector

Your ESD-9160 is designed and built to give you years of trouble-free performance without the need for service. No routine maintenance is required.

If your unit does not appear to be operating properly, please follow these troubleshooting steps:

- ▶ Make sure the power cord is properly connected.
- ▶ Make sure the socket of your vehicle's cigarette lighter is clean and free of corrosion.
- ▶ Make sure the power cord's cigarette lighter adapter is firmly seated in your cigarette lighter.
- ▶ Check the power cord fuse. (Unscrew the ribbed end cap of the cigarette lighter adapter and examine the fuse. If required, replace it with a 1-amp fuse only.)

Service

You can receive technical assistance with your unit through one of our customer support services:

Automated Help Desk is available 24 hours a day, 7 days a week at 773-889-3087.

Customer Service Operators are available at 773-889-3087 Monday through Friday, 8:00 a.m. to 6:00 p.m. CST.

Questions can be faxed to 773-622-2269.

Automated Technical Assistance is available 24 hours, 7 days a week via e-mail at: productinfo@cobra.com

On-line answers to frequently asked questions can be found at: www.cobra.com.

If you suspect that your unit requires service, please call 773-889-3087 BEFORE shipping it to Cobra.® This will ensure that you receive service as quickly as possible.

If you are asked to send your unit to the Cobra® factory, please follow these steps:

1. Send the complete unit, including power cord. (It is not necessary to include the mounting bracket.)
2. For warranty repair, enclose some form of proof-of-purchase, such as a photocopy or carbon copy of a sales receipt. If you send the original receipt, it cannot be returned.
3. Enclose a typed or clearly written description of the problem you are having with your unit, plus the name and address where you want the unit returned.
4. Pack the unit securely to prevent damage during transit. If possible, use the original packing materials.

5. Ship prepaid and insured using a traceable carrier such as United Parcel Service (UPS), Federal Express, or first class mail with delivery confirmation. Ship to:

**Cobra Factory Service
Cobra Electronics Corporation
6500 West Cortland Street
Chicago, IL 60707 USA**

6. Please allow 3 to 4 weeks before contacting us about the status of your service. Call 773-889-3087 for assistance.

If your unit is under warranty, it will either be repaired or replaced upon receipt, depending on the model. If your unit is out of warranty, you will receive a letter informing you of the repair or replacement charge.



Cobra Electronics Corporation
6500 West Cortland Street, Chicago, Illinois 60707
www.cobra.com

COBRA ELECTRONICS CORPORATION

warrants that its Cobra® 10 Band™ Radar/Laser Detectors, and the component parts thereof, will be free of defects in workmanship and materials for period of one (1) year from the date of first consumer purchase. This warranty may be enforced by the first consumer purchaser, provided that the product is utilized within the U.S.A.

Cobra® will, without charge, repair or replace, at its option, defective 10 Band™ Radar/Laser Detectors, products or component parts upon delivery to the Cobra® Factory Service Department, accompanied by proof of the date of first consumer purchase, such as a duplicated copy of a sales receipt.

You must pay any initial shipping charges required to ship the product for warranty service, but the return charges will be at Cobra's expense, if the product is repaired or replaced under warranty.

This warranty gives you specific rights, and you may also have other rights which vary from state to state.

Exclusions: This limited warranty does not apply; 1) to any product damaged by accident; 2) in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs; 3) if the serial number has been altered, defaced or removed; 4) if the owner of the product resides outside the U.S.A.

All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the length of this warranty.

Cobra® shall not be liable for any incidental, consequential or other damages; including, without limitation, damages resulting from loss of use or cost of installation.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

Band	Frequencies		
X band	10.525	± 0.050	GHz
K band	24.125	± 0.125	GHz
Safety Alert® Traffic Warning System	24.070	± 0.010	GHz
	24.110	± 0.010	GHz
	24.190	± 0.010	GHz
	24.230	± 0.010	GHz
Ka band	34.700	± 1.300	GHz
Laser	910	± 50	nm
Strobe	700	± 300	nm
Unit Dimensions & Weight			
Dimensions	3"W x 1 1/4"H x 4 1/4"D		
Weight	140 grams		

This radar detector is covered by one or more of the following U.S. patents: 5,497,148; 5,594,432; 5,612,685; 6,078,279; 6,094,148. Additional patents may be listed inside the product or pending.

You can find these fine accessories at your local Cobra® dealer. If you wish, you can order directly from Cobra®.

To order by phone


Call **773.889.3087**
(Press 1 from the main menu
8 a.m.-6 p.m. M-F CST.)

To order by mail or fax

Please fill out order form on next page,
and mail/fax directly to Cobra®.


To order online

Go to www.cobra.com and click
"shop Cobra®"

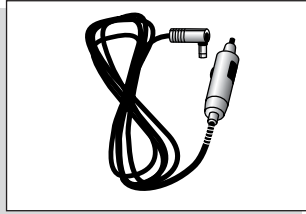


Straight 12V DC Power Cord

Includes plug and fuse
420-030-N-001

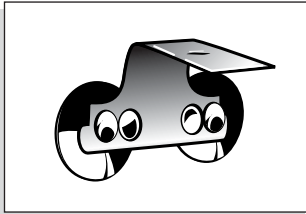


Windshield Mounting Bracket

Includes suction cups
545-139-N-001

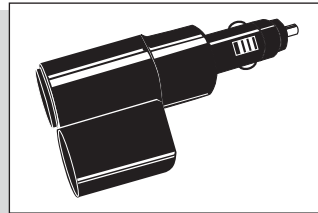

Dual Port Power Adapter

Includes adjustable plug (upto 90°)
and fuse xxx-xxx-N-001

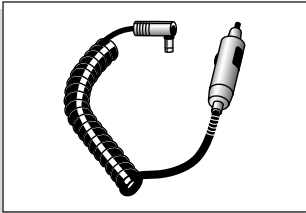

Curled 12V DC Power Cord

Includes plug and fuse
420-026-N-001

Item #	Description	Cost Ea.	Qty.	Amount
420-030-N-001	Straight 12V Power Cord			
420-026-N-001	Curled 12V Power Cord			
545-139-N-001	Windshield Mounting Bracket			
xxx-xxx-N-001	Dual Port Power Adapter			

Prices subject to change without notice.

Tax Table

Illinois residents add 8.75%
Indiana residents add 5%
Michigan residents add 6%
Ohio residents add 5%
Wisconsin residents add 5%

Subtotal	
(Tax if applicable)	
Shipping/handling	\$4.00
Total	

For credit card orders fill out order
form and fax to: **773.622.2269**
or call **773.889.3087**
(Press 1 from the main menu)
8:00 am - 6:00 pm, M-F, CST.

Make check or money order
payable to:
Cobra Electronics
6500 West Cortland Street
Chicago, IL 60707 USA
Attn: Accessories Dept.

To order online,
please visit our website at:
www.cobra.com
and click "shop Cobra®"

Please print clearly

Name _____

Address (No P.O. Box) _____

City _____ State _____

Zip _____

Telephone (_____) _____

Credit Card No. _____ Exp. Date _____

Circle One: Visa MasterCard Discover

Customer Signature _____

Allow 2-3 weeks for delivery. Offer valid in Continental U.S. only.



The Cobra® line of quality products includes:

CB radios

microTALK® radios

Radar/Laser Detectors

Safety Alert®
Traffic Warning Systems

Accessories

HighGear™ Accessories

For more information or
to order any of our products,
please visit our website:

www.cobra.com

Click "shop Cobra®"

Nothing comes close to a Cobra™