

## ご注意


本製品にヘッドセットのプラグを接続する時は、次の点にご注意願います。プラグのカバー部分を半分程度までVOXケース奥まで差し込んでください。これは、コードが引っ張られたとき、容易にプラグが抜けることを防止するためです。

また、プラグを接続したときの防滴性能を維持するために、硬めになっていますので注意してください。

なお、プラグを抜くときは、必ずプラグのカバー部分を持って引き抜いてください。絶対にコードを引っ張ってプラグを抜かないでください。コードを引っ張ると、断線する場合があります。

VOX機能が動作しない場合、プラグが確実に差し込まれているか確認してください。

[PTT-VOX]スイッチは、端までスライドさせて確実に切り替えてください。確実に切り替わっていないときは、PTTおよびVOX機能が使えない場合があります。

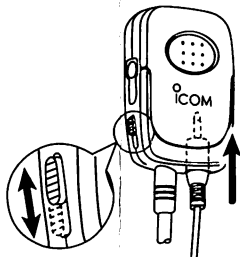

## IMPORTANT!

When connecting an optional headset, even though the plug may feel tight due to drip-resistant construction, the plug should be firmly inserted into the VOX unit. (So that the cover is half-way inserted) This prevents the plug from being disconnected easily when the cable is pulled.

**NEVER** pull the cable to disconnect the plug, otherwise the cable may be damaged.

Please check the correct connection of the headset plug, if the VOX function does not work.

**Make sure** the [PTT-VOX] switch is switched over completely to the opposite end to ensure correct operation. Otherwise, both the PTT and VOX function may not work properly.