### LASER/RADAR ALERTS

# Safety Warning System/Audio/Visual Alerts When your Whistler detector detects a

safety radar signal, it provides a distinctive audio tone and the Numeric Icon display shows an "S." and a decimal point when a Safety radar signal is detected. (XTR-260/330)



Note: You will not be able to receive SWS alerts if transmitters are not located in your area.

### **VG-2 ALERTS**

#### VG-2 Detection Mode

The VG-2, also known as a "radar detector detector," is a special receiver used by police to detect signals radiated by a radar detector. See page 21 for more information on VG-2.

When a VG-2 signal is detected, the VG-2 alert is sounded. After 3 seconds, the audio is cancelled and the VG-2 indicator flashes at a slower rate. Every 30 seconds, the detector checks for a VG-2 signal. This cycle is repeated if the VG-2 signal is detected again. If no signal is detected, two beeps are provided indicating an "all clear" condition.

During the period a VG-2 signal is detected, a radar signal cannot be detected. However, because the VG-2 alert has confirmed that a patrol car is nearby, you are already aware of the potential for speed monitoring and can adjust your speed accordingly. Laser detection is not affected while a VG-Ž signal is detected.

## 14

### SPEED MONITORING

Radar Detector Detectors (VG-2) **Spectre** The Interceptor VG-2, or simply VG-2, is a microwave receiver used by police to detect signals radiated by the local oscillator of a radar detector. Because its purpose is to identify persons driving with radar detectors, the VG-2 is known as a "radar detector detector". The VG-2 is a tool used by the police to identify radar detector equipped vehicles. If caught, in a state where detectors are illegal, (see page 18), drivers risk losing their radar detector and receiving a fine. In addition, instant-on radar is almost always used in combination with a VG-2, leaving unsuspecting motorists vulnerable to receiving two tickets—one potentially for speeding, the other for possession of a detector. Having a radar detector capable of detecting the VG-2

may alert you to the presence of a speed trap. For more information on speed monitoring technologies, please visit our F.A.Q. page on our website: www.whistlergroup.com

It is the responsibility of the individual radar detector operator to know and understand the laws in your area regarding the legality of the use of radar detectors.

NOTE: Having a radar detector capable of detecting the VG-2 may alert you to the presence of a speed trap. The newest tool Police have to detect radar detectors is called Spectre. Spectre can detect the majority of undetectable (VG-2) laser/radar detectors on the market

21

### **POPTM MODE ALERTS**

#### POP™ Mode Alerts

Because POP™ Mode radar utilizes the same K or Ka band frequencies, POP™ Mode Alerts will be displayed as regular radar alerts.

### **OPTION SELECT MODE**

## Option Select Mode (XTR-140)

To turn VG-2 ON/OFF, press the Menu button and the "V" icon will illuminate indicating VG-2 is engaged. Press the Menu button again to disengage VG-2.

# Option Select Mode (XTR-260/330)

Press the Menu button to enter Option Select Mode. Each press of the Menu button changes to the next selectable feature.

The Dark (D) button and the Quiet (Q) button turns the feature ON/OFF or Blinking. The decimal point illumination indicates whether a feature is on or off. A button must be pressed within 20 seconds or Option Select Mode will automatically be exited.

# Model: XTR-260

Feature:	Option:
VG-2 (default = OFF)	<b>D</b> for ON, <b>Q</b> for OFF
Dual LED Alert Periscope (default = Blinking with alert)	<b>D</b> or <b>Q</b> for ON, OFF, BLINKING
Dual Alert Display (default = Blinking with alert)	<b>D</b> or <b>Q</b> for ON, OFF, BLINKING
Model: XTR-330	

Feature:	Option:
VG-2 (default = OFF)	<b>D</b> for ON, <b>Q</b> for OFF
Dual LED Alert Periscope (default = Blinking with alert)	<b>D</b> or <b>Q</b> for ON, OFF, BLINKIN
POP™ Mode (default = ON)	<b>D</b> for ON, <b>Q</b> for OFF
SWS (default = ON)	<b>D</b> for ON, <b>Q</b> for OFF
	15

# WARRANTY INFORMATION

Consumer Warranty

This Whistler Laser/Radar detector is warranted to the original purchaser for a period of one year from the date of original purchase against all defects in materials and workmanship. This limited warranty is void if the unit is abused, modified, installed improperly, if the housing has been removed, or if the serial number is missing. There are no express warranties covering this product other than those set forth in this warranty. All express or implied warranties for this product are limited to one year. Whistler is not liable for damages arising from the use, misuse, or operation of this product.

### Service Out of Warranty

Units will be repaired at "out of warranty" service rates

- •The units original warranty has expired.
- •A dated store receipt is not supplied.
- •The unit has been returned without its serial number •The unit has been abused, modified, installed improperly, or had its housing removed.

Service Under Warranty During the warranty period, defective units will be repaired without charge when returned with a dated store receipt to the address below. Units returned without dated store receipt will be handled as described in section "Service Out Of Warranty." Due to the specialized equipment necessary for testing a laser/radar receiver, there are no authorized service stations for Whistler brand detectors other than Whistler.

#### TROUBLESHOOTING GUIDE

#### Reset Features

All user features can be reset to factory settings.

#### Default Factory

- 1. Unplug Power Cord from unit.
- Press and hold Quiet.
- 3. Plug the Power Cord into the unit (Power switch turned on)
- 4. Wait for 2 beeps 5. Release the Quiet button.
- Unit is now reset.

### **Default Factory Settings are:**

- Dim/Dark Mode to full illumination of display.
- Auto Quiet Mode OFF.
- VG-2 Detection Mode OFF.
- Self Test Mute OFF • D.A.D. ON (XTR-260)
- Dual LED Alert Periscope to Flash
- POP™ Mode ON (XTR-330)

Your Whistler detector is expertly engineered and designed to exacting quality standards to provide you with reliable, trouble-free operation. If your unit has been correctly installed following the guidelines in this manual, but is not operating optimally, please refer to the troubleshooting guide below.

### PROBLEM: No display or audio.

Check fuse in plug; replace if necessary with a 2 amp 3AG type. Check fuse for lighter socket; replace if necessary. Make sure cigarette the lighter socket is clean.

# PROBLEM: Audio alerts are not loud

enough. Cancel Auto Quiet Mode or City Mode. Check audio level setting (see pg.8).

### **WARRANTY INFORMATION**

When returning a unit for service, please follow these instructions:

1. Ship the unit in the original carton or in a suitable sturdy equivalent, fully insured, with return receipt requested to:

#### Whistler Repair Dept. 1201 North Dixieland Rd Rogers, AR. 72756

### Please allow 3 weeks turn around time.

IMPORTANT: Whistler will not assume responsibility for loss or damage incurred in shipping. Therefore, please ship your unit insured with return receipt requested. COD's will not be

2. Include with your unit the following information, clearly printed: •Your name and street address (for shipping via UPS), a daytime telephone number and an e-mail

address, if applicable

- •A detailed description of the problem (e.g., "Unit performs self-test but does not respond to radar"). •A copy of your dated store receipt or bill of sale.
- 3. Be certain your unit is returned with its serial number. For reference, please write your unit's serial number in the following space: \_\_

Units without serial numbers are not covered under warranty. **IMPORTANT:** To validate that your unit is within the warranty period, make sure you keep a copy of your dated store receipt. You may register your warranty online at www.whistlergroup.com, however, for warranty verification purposes, a copy of vour dated store receipt must accompany any unit sent in for warranty work.

#### TROUBLESHOOTING GUIDE

PROBLEM: The unit gives laser alert when

power cord. Substitute another cord to

If difficulties occur which cannot be solved by

information in this Troubleshooting Guide,

please call Whistler Customer Service at

1-800-531-0004 or visit our FAQ page at

www.whistlergroup.com/faq-detectors.asp

prolonged exposure to direct sunlight by

cleaners, or polishes directly onto the unit.

openings and damage the unit. Also, do

not use any abrasive cleaners on the unit's

removing your unit from the dash when

your vehicle is parked for an extended

The spray may penetrate through the

period of time. Do not spray water,

before returning your unit for service.

During the summer months, avoid

defective cord to the factory.

Care & Maintenance

exterior.

PROBLEM: The unit alarms when vehicle hits

**bumps.** Check for loose lighter socket; tighten

and clean. Check connections at both ends of

determine if the cord is defective. Return the

accelerating. See F. A. Q. on website.

Service Out of Warranty (Continued) The minimum out of warranty service fee for

your Whistler detector is \$35.00 (U.S.). If you require out of warranty service, please return your unit as outlined in the section "Service Under Warranty" along with a certified check or money order for \$35.00. Payment may also be made by MasterCard, VISA or American Express; personal checks are not accepted.

17

**WARRANTY INFORMATION** 

In the event repairs cannot be covered by the minimum \$35.00 service fee, you will be contacted by a Whistler technical service specialist who will outline options available to you. If you elect not to have your unit repaired, it will be returned to you along with your certified check or money order.

IMPORTANT: When returning your unit for service, be certain to include a daytime telephone number and an email address (if applicable).

#### Customer Service

If you have questions concerning the operation of your Whistler detector, or require service during or after the warranty period, please call Customer Service at:

1-800-531-0004.
Representatives are available to answer your questions
Monday - Friday from 8:00 a.m. to 5:00 p.m. (CT).

www.whistlergroup.com

#### **ARE DETECTORS LEGAL?**

#### In Most States YES!

Laser-Radar detectors are legal in every state (with the exception of Virginia and Washington, D.C., which have local regulations restricting the use of radar receivers in any vehicle) when used in automobiles or light trucks (under 10,000

Concerning trucks over 10,000 lbs., the Federal Highway Administration (FHWA) issued a regulation, effective January, 1994 which prohibits radar and laser detector use in these types of vehicles nationally. Prior to the FHWA regulation, laws existed in the state of New York restricting the use of radar detectors in trucks over 18,000 lbs. and in Illinois in trucks over 26,000 lbs.

## **FCC Information**

FCC ID: HSXWH10 - XTR-140/260/330 FCC ID: HSXWH21 - XTR-140/260/330

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference.

- (2) This device must accept any interference received, including interference that may cause undesired operation.

**IMPORTANT:** FCC requirements state that changes or modifications not expressly approved by Whistler could void the user's authority to operate the equipment.

### 18

### **SPECIFICATIONS**

Laser Wavelength:

 $905 \pm 50$  nanometers (nm)

#### Radar Frequencies:

10.500 - 10.550 GHz (X Band) 24.050 - 24.250 GHz (K Band)

33.400 - 36.000 GHz (Ka Superwideband)

#### **Operating Temperature Range:** -20° C to +80° C (-4° F to +176° F)

#### **Power Requirements:**

Operational 12 to 15 volts DC, 250mA nominal Vehicle Battery Saver, 30mA nominal.

One or more U.S. patents may apply: #5,146,227, #5,379,456, #5,666,120, #5,990,821

POP™ Mode is a trademark of MPH Industries,

SWS® is a trademark of Safety Warning System L.C.

 $(\epsilon$ 

Specifications are subject to change without

## 19

the following section, in mind:

Radar Facts

radar bands.

Laser Facts

A radar gun operates by transmitting radio

objects and are then picked up by the radar

gun's receiving section. When a radar beam

reflects off a moving target, a measurable

waves at certain frequencies which reflect off

frequency shift occurs. The radar unit converts

this shift into miles per hour to determine your

vehicle's speed. Currently, the FCC (Federal

(10.500 - 10.550 GHz), K Band (24.050 - 24.250

Note: A radar detector will only alarm if an

officer is transmitting on any one of the above

It's well documented that many radar guns

targeted vehicle that is traveling in a group of

vehicles. In contrast, a laser gun can target a

cannot reliably provide the speed of a

specific vehicle out of a line of traffic and

determine its speed. The advantage of laser

over radar in terms of target identification is

the result of the laser gun's narrow beam. A

four-lane highway at a distance of 1,000 feet,

covers about 3 feet at the same distance. For

radar transmission can cover more than a

compared with a laser transmission which

best protection, keep these points, listed on

Communications Commission) permits

operation of traffic radar guns at X Band

GHz), and Ka Band (33.400 - 36.000 GHz).

**ACCESSORIES** These and other accessories can be

ordered directly from Whistler by calling 1-800-531-0004 or visiting our online store at www.whistlergroup.com

Order#	Description	Price
202138	Visor Bracket	\$ 6.95
202151	Windshield Bracket Kit	\$ 9.95
206552	Straight Power Cord (5')	\$14.95
206553	Coiled Power Cord (7')	\$15.95
206880	Hardwire Kit (10' ) (for wiring to fuse box)	\$ 9.95
206666	Modular* Cord Package (includes coiled and straight cords, and power adapter)	\$17.95
159032	Package of 8 Suction Cups	\$ 2.95
402081	Non Skid Dash Pad	\$ 6.95
206660	Straight Modular Cord & Socket Multiplier	\$11.95
206661	Coiled Modular Cord & Socket Multiplier	\$12.95
500501	Zipped Travel Case	\$ 9.95
Modular: I	nterconnecting pieces cord a	nd plua

Modular: Interconnecting pieces cord and plug. Shipping and handling (per order) \$5.00 Prices are subject to change without notice.

26

### **SPEED MONITORING**

### Laser Facts (Continued)

• Because your vehicle's license plate or headlights are the laser gun's primary targets, mounting your Whistler detector on the dashboard can improve laser detection at short

SPEED MONITORING

- Do not follow closely behind any vehicle you cannot see through. If you can't see past a vehicle ahead of you, chances are your detector won't either.
- The receiving range of your laser detector will not be the same as a radar detector. Laser guns are most often used at short range.

Whistler Laser/Radar detectors receive all current laser guns which operate at a laser wavelength of 905 +/- 10nm.

- LTI 20-20
- Ultra Lyte

Pro Laser<sup>™</sup> I II III

### Other Speed Detection Systems

Several techniques other than radar or laser are used to measure vehicle speeds. When these methods are being used, no detector can provide a warning. These techniques include:

- Pacing A patrol car drives behind you and matches your driving speed.
- Vascar/Aircraft The time it takes a vehicle to travel a known distance is measured.

20

### **OWNER'S MANUAL**

XTR-140/260/330 **Total Band Protection™** LASER-RADAR

**DETECTOR** 

The Whistler Group Corporate Headquarters 13016 N. Walton Blvd. • Bentonville, AR 72712

Tel 479.273.6012 • Fax 479.273.2927 Whistler Customer Return Center 1201 N. Dixieland Rd. • Rogers, AR 72756

> Customer Service Tel 800.531.0004 www.whistlergroup.com

P/N 260011. © Whistler 2007



25 22 23 24

Dear Whistler Owner,

If you have questions concerning the operation of this Whistler product please call:

**CUSTOMER SERVICE** 1-800-531-0004

Monday - Friday • 8:00 am - 5:00 pm CT or visit our website

## www.whistlergroup.com

Please keep the receipt in a safe place. You may register your product online at www.whistlergroup.com. For warranty verification purposes, a copy of your dated store receipt must accompany any unit sent in for warranty work. If the unit is returned without a dated store receipt, an out of warranty service charge applies.

**INSTALLATION** 

• Mount the unit as low as possible near the center of

mirrored sunscreens, etc. These obstructions have

Some windshields have an Instaclear™ or Electriclear

dealer or the owner's manual to determine if your

Avoid placing unit in direct contact with the wind

• To reduce the possibility of theft, conceal the unit

Install the two suction cups and rubber bumper onto

the bracket by fitting them into their holes.

Press the suction cups onto the windshield at the

IMPORTANT: Some newer cars have a plastic

safety coating on the inside of the windshield. The windshield bracket may leave permanent marks on this type of surface. To find out if your vehicle has this

type of windshield, check the owner's manual or ask

your dealer. We recommend that you do not leave

the suction cup bracket on the windshield in direct

sunlight. If the detector is removed, this may cause blistering of the dash in some vehicles.

metal surfaces which can affect radar and laser signals

type coating, which affects radar signals. Consult your

· Do not mount the unit behind wipers, ornaments,

**Mounting Guidelines** 

and reduce critical warning time.

windshield has this coating.

Windshield Mounting

location you have chosen

when not in use

(Regular tinted glass does not affect reception.)

### **INTRODUCTION**

Note: Your warranty period begins at the time of purchase. The warranty is validated only by the dated store receipt! Please record the serial number of the unit in the space provided in the warranty section of the manual.

To fully acquaint yourself with the operation of your Whistler detector and to better understand the differences between detecting radar, laser and safety radar signals, we recommend reading this entire manual or visiting our FAQ page on our website www.whistlergroup.com

Enjoy your Whistler detector and please drive safely.

Sincerely,

The Whistler Group, Inc.

• Plug the small end of the power cord into the

• Plug the large end into the vehicle's cigarette

IMPORTANT: Unscrew slowly. The tip

contains a spring which may fly out when

plug may loosen. Retighten it occasionally.

Power On Self Test & Volume

Power Connection

**Fuse Replacement** 

INSTALLATION

The lighter socket plug is equipped with a replaceable

replace the fuse, carefully unscrew the tip of the plug.

disassembling. Insert the new fuse with the spring and

**OPERATION** 

screw on the tip. With use, the screw cap on the

Each time your Whistler detector is turned on, an

automatic self-test sequence confirms that the

speaker and visual displays are functional. To

Integrated Real Voice® (XTR-330)

When selected, Real Voice® will be used to

Voice OFF/ON is selected by holding quiet

button for approximately 2 seconds. Voice ON

increase the volume, continue turning the

2. Safety Warning System messages

2 amp 3AG fuse located behind the silver tip. To

### TABLE OF CONTENTS

Model Features Summary 3 - 6	
Installation         7 - 8           Mounting Guidelines         7           Windshield Mounting         7           Power Connection And Fuse Replacement         8	
Operation         8 - 12           Power On Self Test & Volume         8           Integrated Real Voice*         8           Feature Engaged Confirmation         9           Self Test Mute         9           Setting Save         9           Auto Quiet Mode         9           Quiet Mode         10           City/City 1/City 2 Modes         10           Highway Mode         10           Dim/Dark Modes         11           Engaging/Disengaging VG-2 Detection         12           Vehicle Battery Saver Mode         12           Stay Alert         12	
aser & Radar Alerts	
G-2 Alerts.     14       OP" Mode.     15       Option Select Mode.     15       roubleshooting Guide     16 - 17       Care & Maintenance     17	
re Detectors Legal?	
peed Facts         19 - 21           Radar Facts         19           Laser Facts         19-20           Other Speed Detection Systems         20 - 21	
Varranty Information 22 - 24	
pecifications	

**OPERATION** 

Each time a button is pressed, one beep confirms the

Simply press the Quiet button during the self-test

sequence to cancel the self-test audio. This will

test audio, simply press the Quiet button during

Setting Saver saves your personalized settings so

that when the detector is turned off and then on

provides an alternate alert pattern, consisting of four

beeps (indicating X. K. Ka or Safety Radar) followed

by clicking. The clicking will continue for as long as

the detected signal is present or any new signal is

• Press Quiet (before a signal is detected) to

Once the Auto Quiet mode is engaged, you

• Press Quiet (when the unit is not alarming) to

Pressing Quiet cancels the audio during an alert and

any new alert within 20 seconds. After approximately

20 seconds, 2 beeps are provided on any new alert,

• Press Quiet a second time during an alert to restore the

may cancel the audio alarm by pressing Quiet.

detected within 20 seconds, becoming more rapid

Pressing QUIET before a radar signal is detected

not affect radar/laser alerts. To restore the self-

**Feature Engaged Confirmation** 

Setting Saver (XTR-260/330)

as the strength of the signal increases.

again, you do not have to re-enter them.

Self Test Mute

the next self-test.

Auto Quiet Mode

engage Auto Quiet.

Quiet Mode


cancel Auto Quiet mode.

and the unit then remains quiet.

Press Quiet to cancel the audio.

feature is "on", two beeps confirm feature "off"

### **XTR-140 FEATURES**

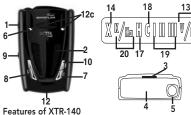

- Total Band Protection Icon Display
- 360° Protection
- VG-2 Cloaking 3 City Modes
- Quiet/Auto Quiet Mode Vehicle Battery Saver Alert Priority
- Dual LED Periscopes

### **XTR-260 FEATURES**



### Features of XTR-260

- Total Band Protection™
- Blue Numeric Icon Display
- 360° Protection
- VG-2 Cloaking • 3 City Modes

Stav Alert

Setting Saver

### Safety Warning System" Alert Priority Dual Alert Ďisplav

Vehicle Battery Saver™

#### Quiet/Auto Quiet Mode Dual LED Periscopes

### **OPERATION** City/City I/City II Mode

Whistler's Three Stage City Mode is designed to reduce the annoyance of automatic door openers, intrusion alarms and other devices which share frequencies with police radar. Generally, X band is used for these devices.

- Press City button to cancel Highway mode and engage City Mode. The display will switch from "H" to "C".
- Press City button again to enter City | Mode.
  Press City button again to enter City | Mode.

Note: After 3 seconds, "I" or "II" City Mode

indicator turns off on the XTR-140.

Pressing City button a fourth time cancels City II Mode and returns the unit to Highway Mode.

In City Mode, weak speed/safety radar signals give an initial alarm of two beeps, and then remains quiet unless the signal becomes very strong. When the signal strength increases, two additional beeps are provided. City I and City II Modes operate the same as Highway Mode, but in City I Mode, only the X band sensitivity is lowered. In City II Mode, X-band is not detected

Caution: Some towns/small cities may still be using X band radar. City Modes do not change the audio alert for laser or VG-2.

#### Highway Mode

Highway mode provides full audio warnings any time radar (X, K, Ka, Safety Radar) or laser signals are detected, and is recommended for open road driving.

#### **XTR-330 FEATURES FEATURE DESCRIPTIONS**

Whistler's ergonomic and user-friendly design provides a new level of operating convenience. Special features include:

#### Note: Not all units have all features listed.

- 1. Bracket Release Button provides quick and easy release of the mounting bracket.
- 2. Speaker provides distinct audio warnings for X, K, Ka band radar, safety radar, laser and
- 3. Mounting Bracket Location slot holds mounting bracket firmly.
- Radar Antenna compact, high-efficiency antenna receives radar signals.
- Front Laser high gain optical lens provides increased sensitivity and field of view for leading-edge laser detection.
- 6. Rear Laser an integrated optical waveguide provides superior detection of laser signals transmitted from behind.
- 7. City Button reduces the annovance of false alerts typically encountered in urban 8. Quiet Button - pressing QUIET before a
- radar signal is detected engages Auto Quiet Mode which provides "clicking" sounds after the initial warning. Pressing QUIET during a radar encounter silences audio alerts, while allowing visual alerts to keep you informed.
- 9. Power / Volume Control turns unit on/off and adjusts audio level.
- 10. Dim Dark engages Dim/Dark modes

Vehicle Battery Saver Mode

- 11. Menu Button (XTR-140) turns VG2 on/off. (XTR-260/330) enters option select mode
- 12. Icon Display offers easy-to-read display to indicate power, city mode, radar band identification, and signal strength.

**OPERATION** Engaging/Disengaging VG-2 See Option Select Mode to turn this feature on.

The Vehicle Battery Saver Mode automatically

shuts off your detector after 6 hours. The timer

is reset if the detector is turned off, unplugged

or any button is pressed before the time has

expired. The detector will alert you with an

audible and visual warning before it shuts off.

the unit by pressing any button. This will reset

the timer. If the unit has automatically turned

Stay Alert Feature (XTR-260/330)

The Stay Alert Feature is designed to test a

itself off, press any button to turn the unit back on.

During this warning, you can momentarily reset

#### 12a. Numeric Icon Display (XTR-260/330) combines icon display with a 7 segment digital display that shows signal strength indication and band identification.

**FEATURE DESCRIPTIONS** 

- 12b. Dual Alert Display: D.A.D. (XTR-260) provides additional visual alerts of threats
- 12c. Dual Alert LED Periscope provides
- additional visual alerts. 13. VG-2/Laser Icon - indicates the unit is
- receiving VG-2 or laser signals. 14. X-band Icon - indicates the unit is receiving an X-band signal.
- 15. K-band Icon indicates the unit is receiving a K-band signal.
- 16. Ka-band Icon indicates the unit is receiving a Ka-band signal.
- 17. H indicates unit is in Highway mode.
- 18. C City Icon indicates that the unit is operating in city mode.
- 19. Signal Strength Icon indicates the strength of the signal being detected. 20. K/Ka-band Icon - shows the unit is receiving
- a K or Ka band signal. K/Ka indicator will flash for Ka band. 21. V - indicates that the unit is receiving a
- VG-2 signal. Indicates that VG-2 is engaged. 22. L - indicates that the unit is receiving a laser
- Total Band Protection™ Complete Band Coverage that detects laser, radar, VG-2 and safety radar bands.

## **LASER/RADAR ALERTS**

### Laser Audio / Visual Alerts

When a laser signal is detected, the display indicates alert by illuminating the "V/L" and scrolling the signal strength indicators from right to left or display indicates an "L" on the display. The audio alert is continuous for a minimum of 3 seconds.

### Laser Tips

If you are the targeted vehicle, a laser gun can often determine your speed within a few seconds after you receive an alert. In this situation there is generally no time to safely adjust your speed. However, if you are traveling near or behind the targeted vehicle and receive an alert, response time should be sufficient. Any laser alert, regardless of duration, requires immediate action!

#### Pulse Protection®

detect than conventional radar because it remains "off" until activated to measure the speed of a targeted vehicle. When a pulse type transmission is detected, your Whistler detector sounds an urgent 3-second audio warning and flashes the Alert strength indicators at their fastest rate. (The XTR-260/330 models display "P".) After the 3-second pulse alert, the standard alert pattern continues for as long as the signal is present. It is important to respond promptly to a pulse alert, since warning time may be

13

**OPERATION** Dual Alert Display D.A.D. (XTR-260)

• Quiet/Auto Quiet Mode

Vehicle Battery Saver

• Dual LED Periscopes

Safety Warning System

• Dim/Dark Mode

• Stay Alert

• Setting Saver

Alert Priority

Whistler's Dual Alert Display (D.A.D.) provides an additional attention getting visual alert to the already Intense Blue Numeric Display. The two extra LED's in the display area flash on and off when the unit alarms to provide a unique visual alert. D.A.D. can be programmed, through the Option Select Mode to:

1. flash for all alarms, 2. remain on, or 3. turn D.A.D. off completely.

### **Dual LED Alert Periscope**

Features of XTR-330

• Total Band Protection

Icon Display
• Detects POP™ Mode

• Red Numeric

• 360° Protection

VG-2 Cloaking

• 3 City Modes

• Real Voice®

Whistler's new Dual LED Alert Periscope provides an additional attention getting visual alert. The two extra LED's flash on and off when the unit alarms to provide a unique visual alert. This alert can be programmed, through the Option Select Mode to: 1, flash for all alarms, 2, remain on, or 3. turn LEDs off completely.

# Dim/Dark Mode (XTR-260/330)

- Dim setting. Press the Dark button a second time engages Dark
- In Dark mode display illumination is further

display returns to the dimmer setting. · Pressing the Dark button a third time restores full

illumination to the display.

# Dim/Dark Mode reduces the illumination of the

- Press the Dark button to reduce illumination to a

reduced. Dim or dark can be engaged during an alert. In Dark Mode, the display goes dark for as long as a signal is being detected and for 20 seconds after, then the

will announce "caution", Voice OFF will give a double beep.

articulate the following:

1. Band Identification

3. Feature Selection

volume knob.

standard audio alert pattern; or turn the unit off, then on.

10

driver's alertness. To engage (when unit is not Press and hold the City button for less then 2 seconds.

The "H" or "C" will flash indicating Stay Alert is activated. Within 30-60 seconds two beeps are sounded: to show alertness, the driver must press either the City, Menu or Quiet button within 3-5 seconds. If the button is pressed within 3-5 seconds, the cycle is repeated. If a button was not pressed within 3-5 seconds, the alarm sounds and the display flashes all the LEDs.

Press Dark to cancel Stay Alert

WARNING!!! Stay Alert is NOT intended as a substitute for adequate rest. You should NOT operate a vehicle if you are drowsy. During extended periods of vehicle operation, you should take frequent breaks. Improper reliance on the Stay Alert may result in vehicle damage, personal injury ór death

NEVER OPERATE A VEHICLE IF YOU ARE DROWSY.

11 12

# Pulse (or instant-on) radar is more difficult to